






Cintropur®

WATER FILTRATION & TREATMENT









Pressure drop
Perte de charge
Drukverlies
Druckverlust
Pérdida de carga
Spadek ciśnienia
Потеря давления
Perdas de carga











Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

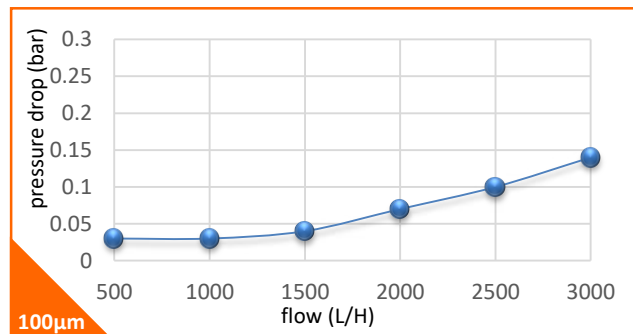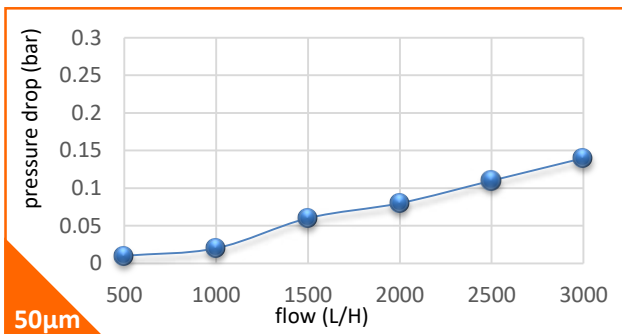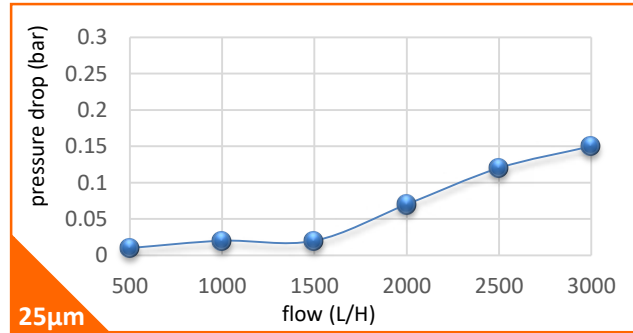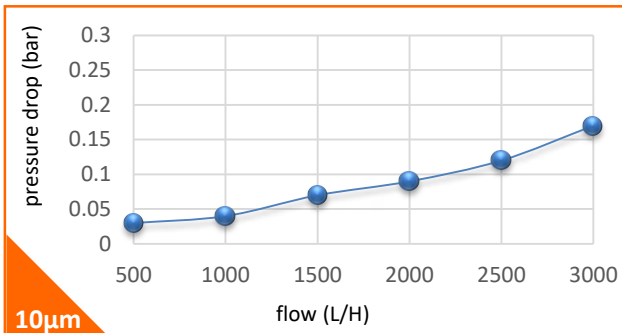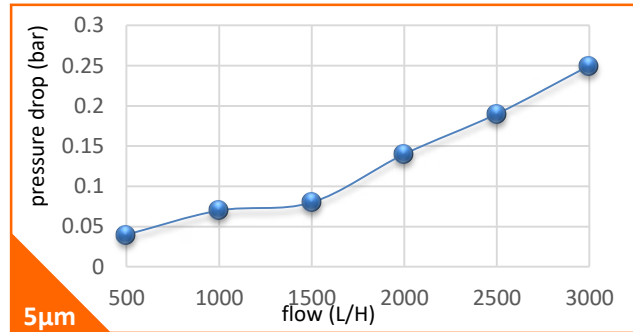



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perdidas de carga

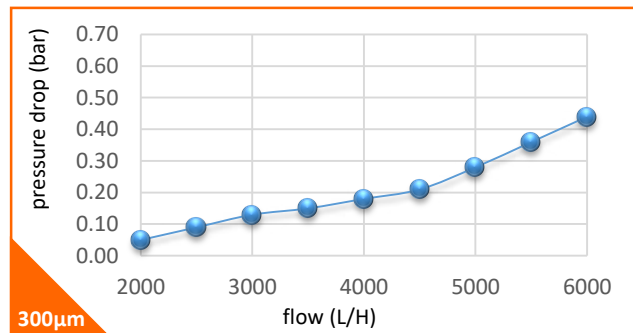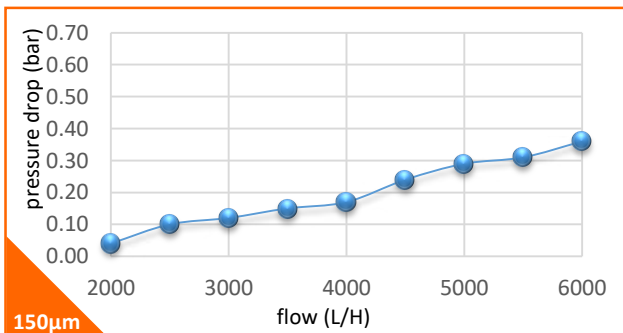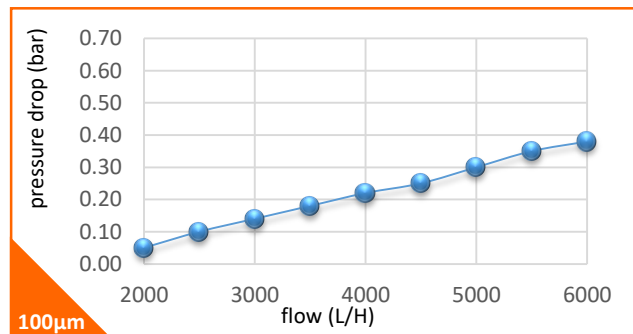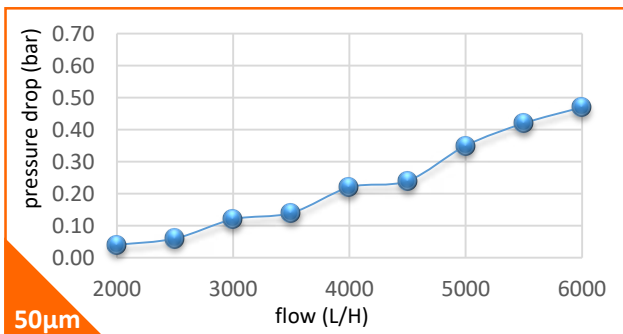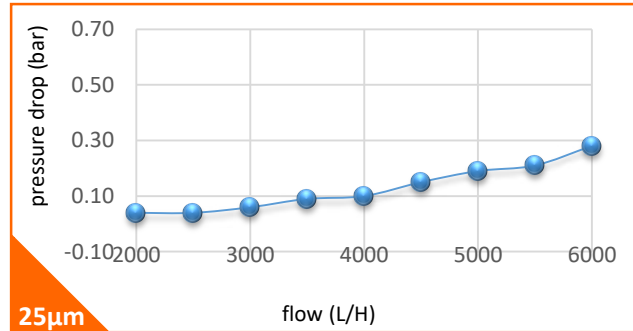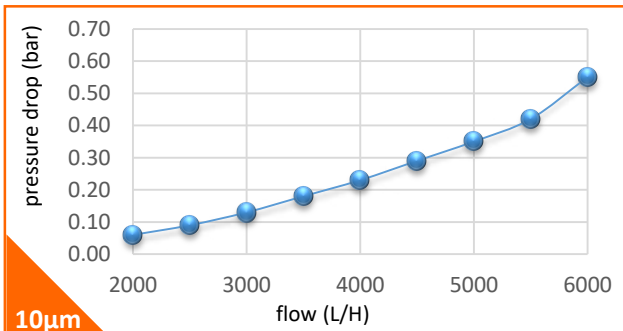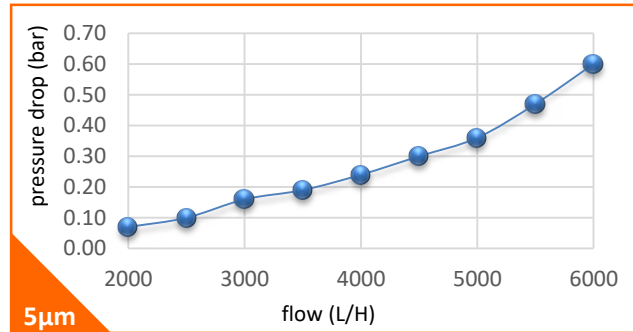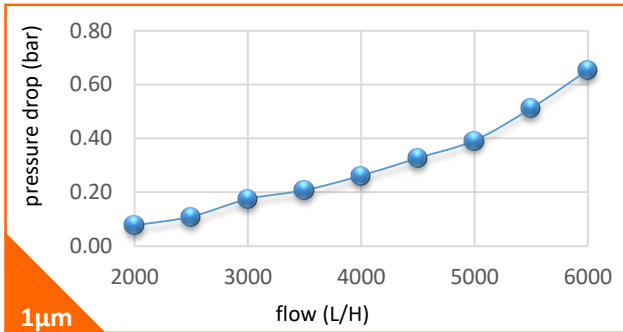




Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

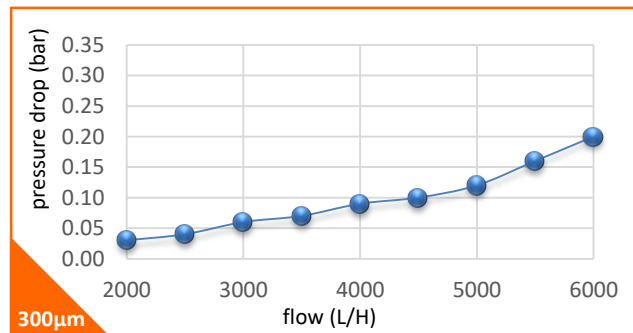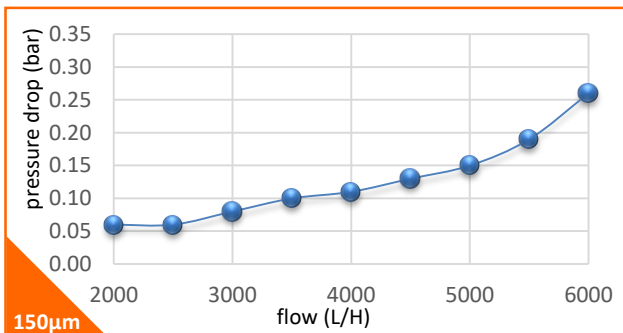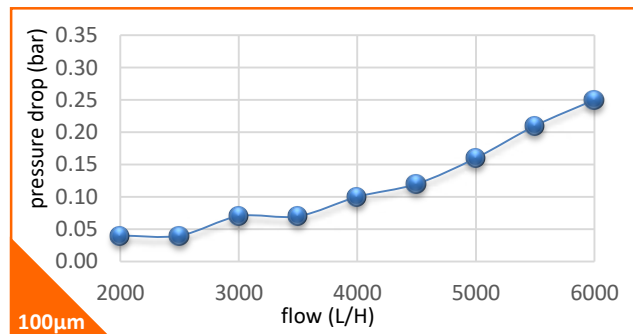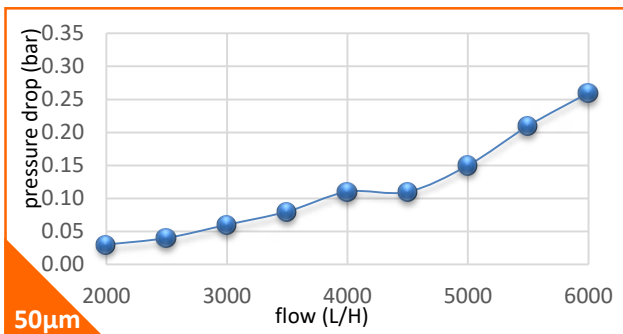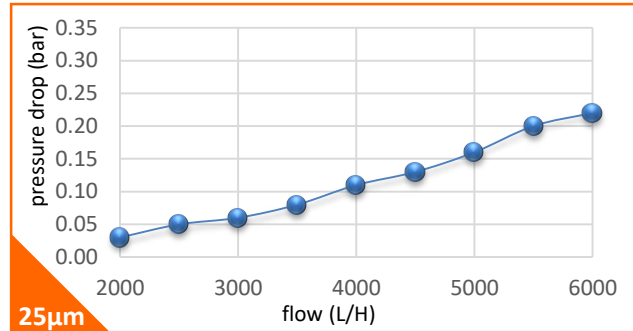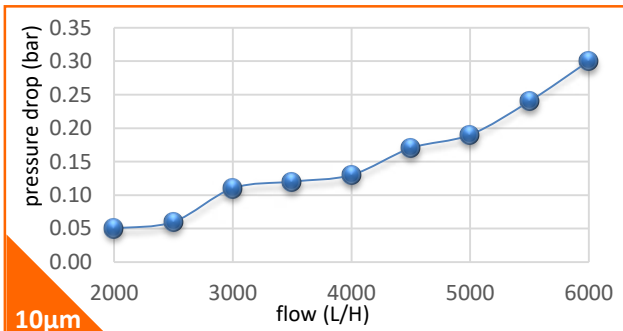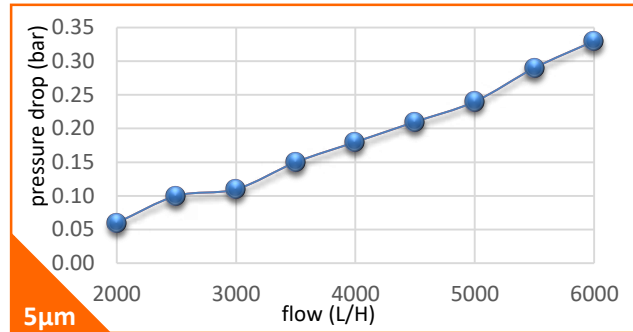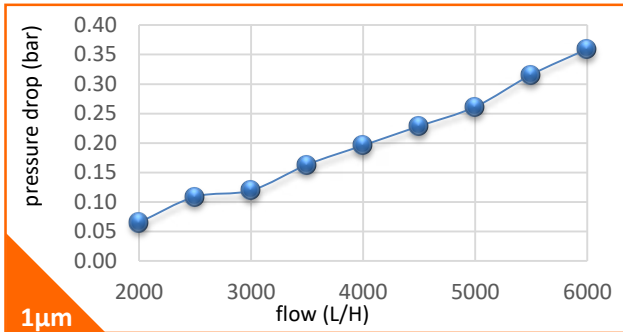







Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

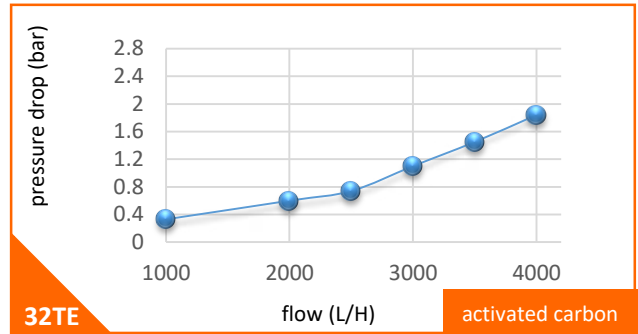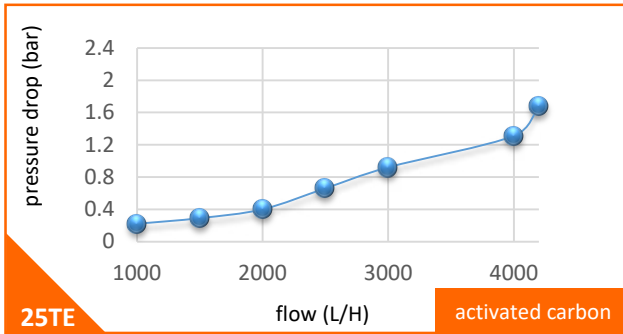







Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

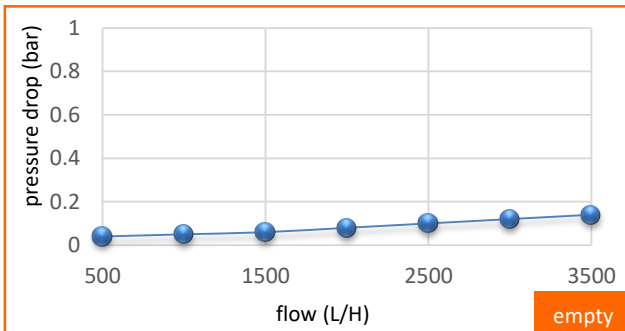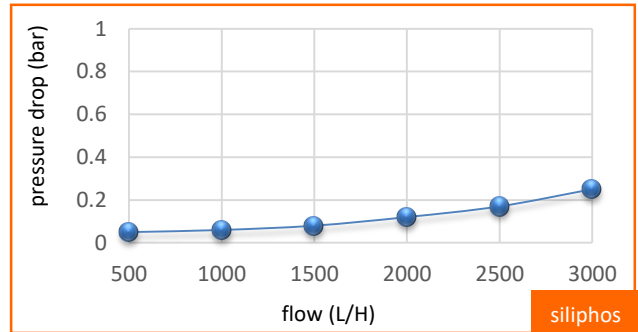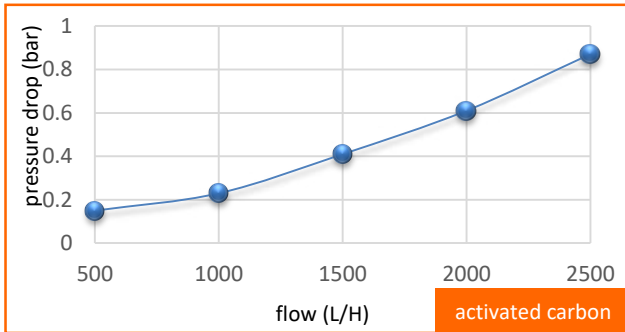



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

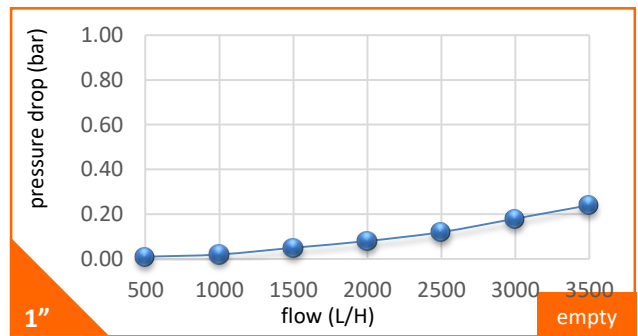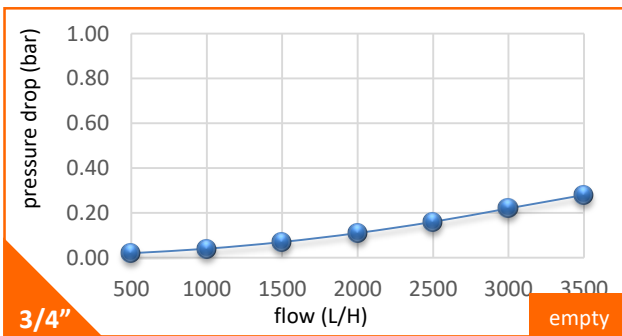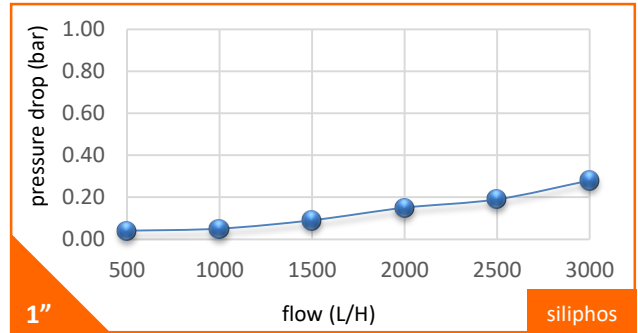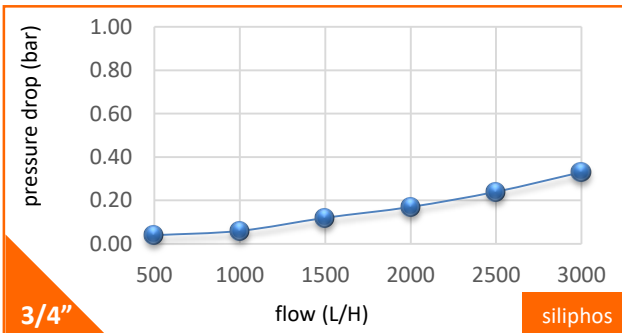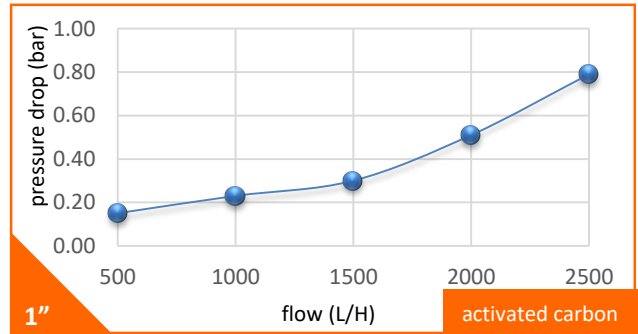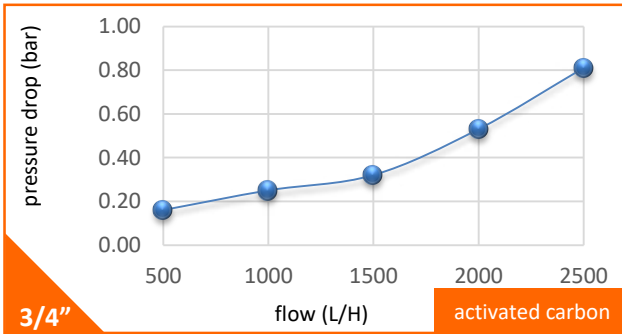




Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

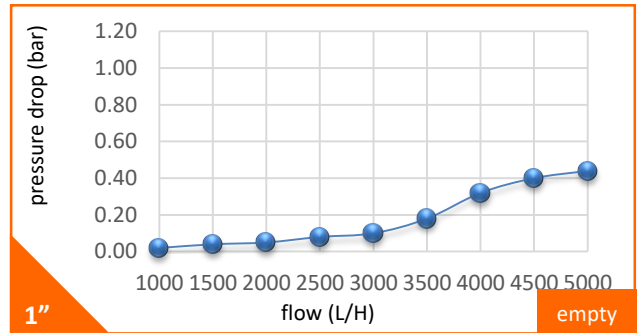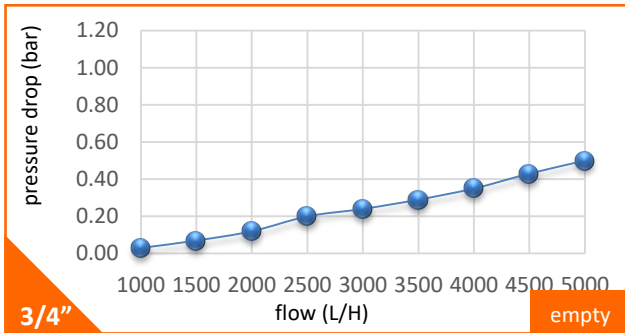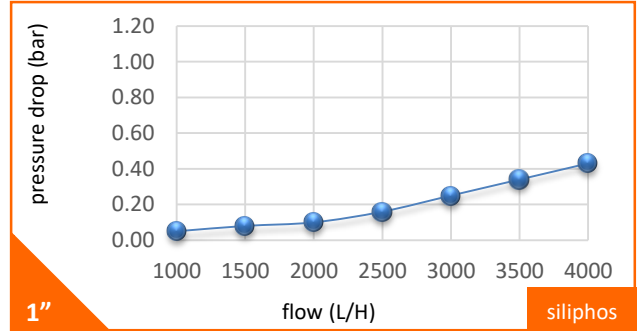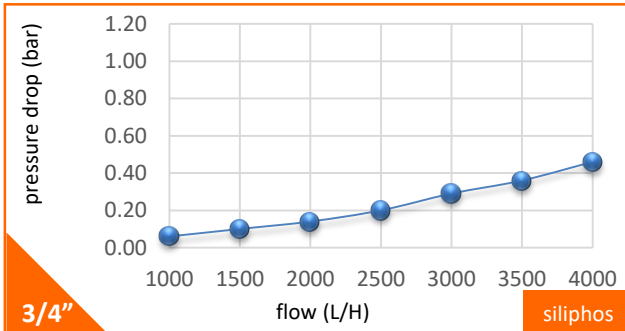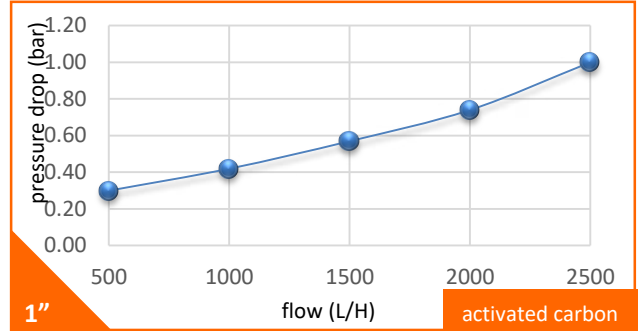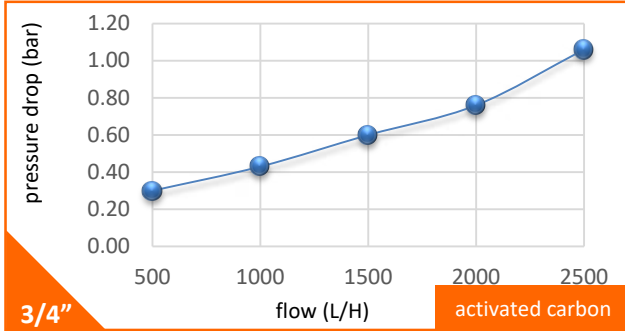









Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

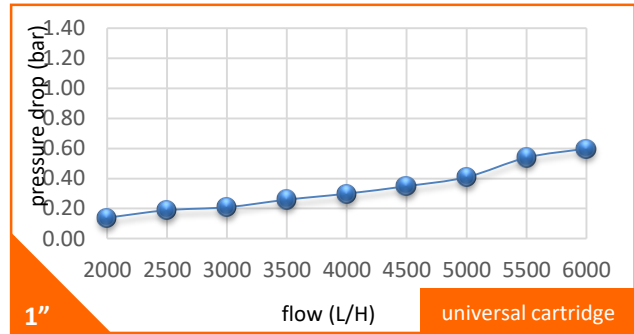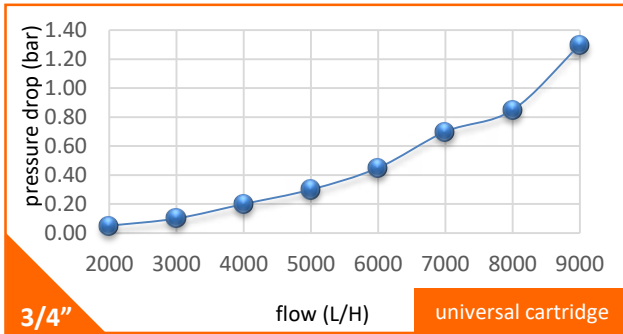






Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

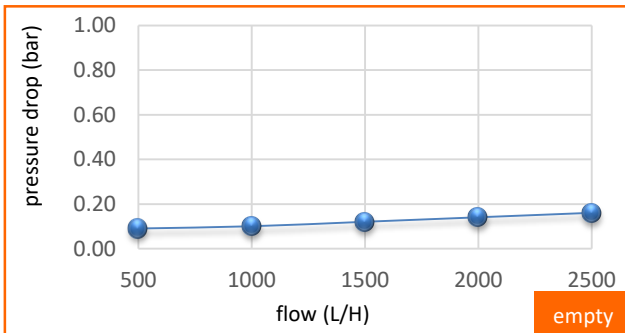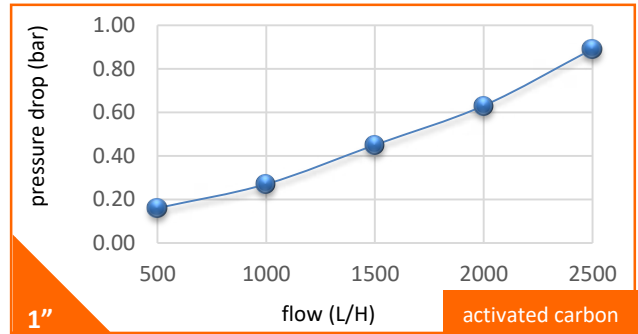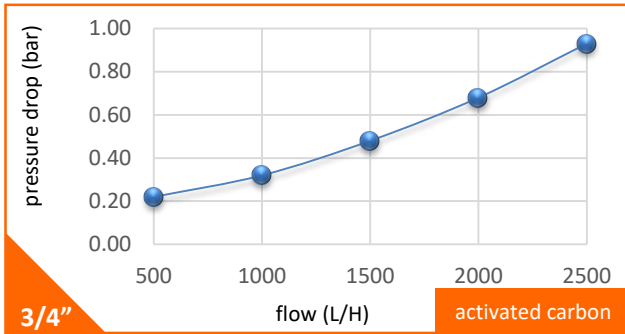









Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

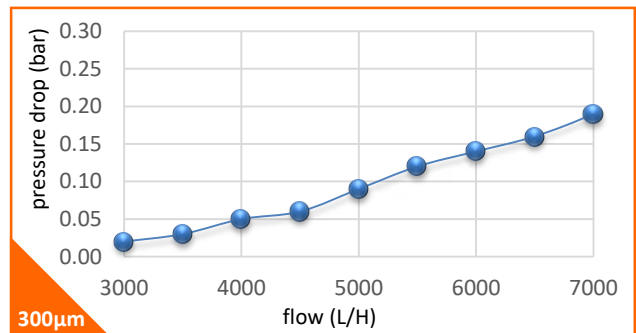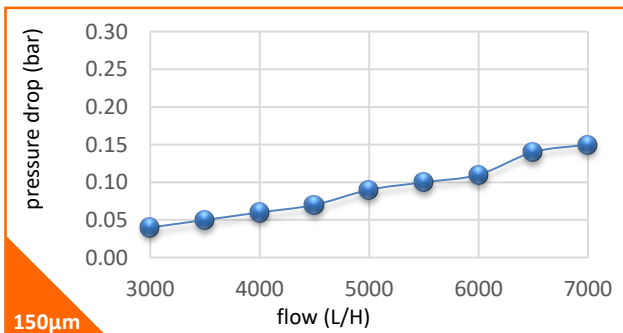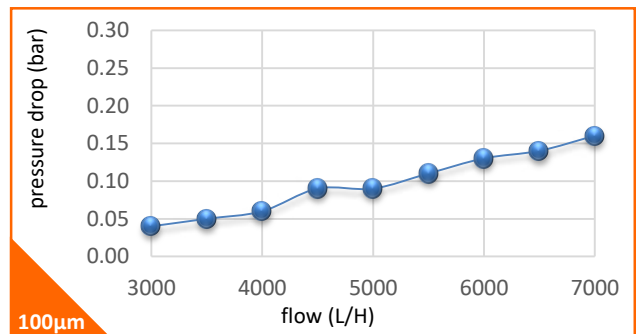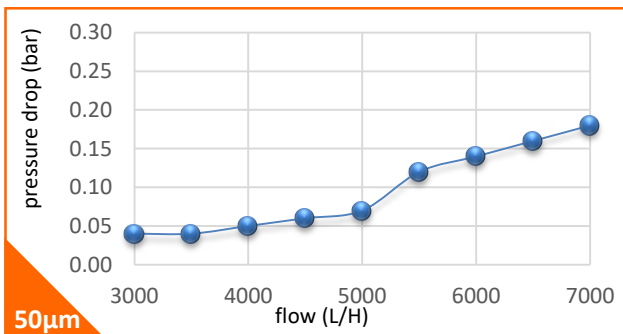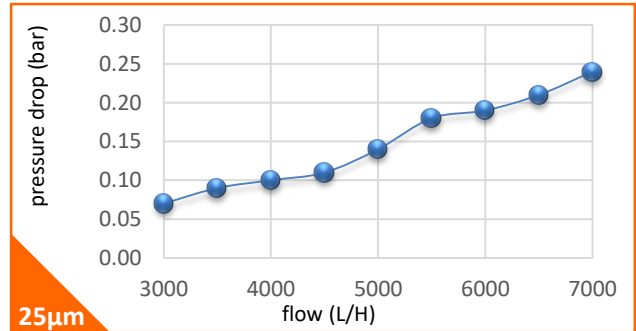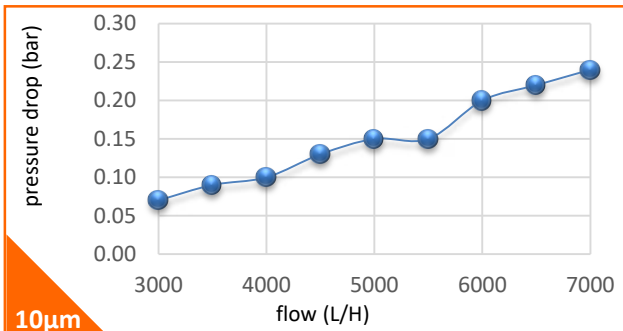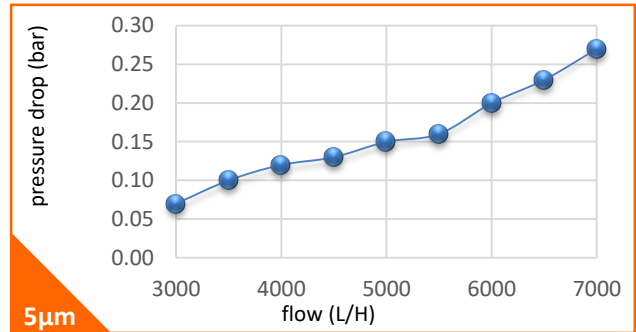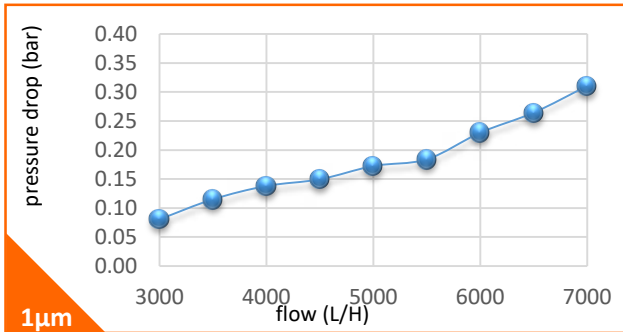









Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

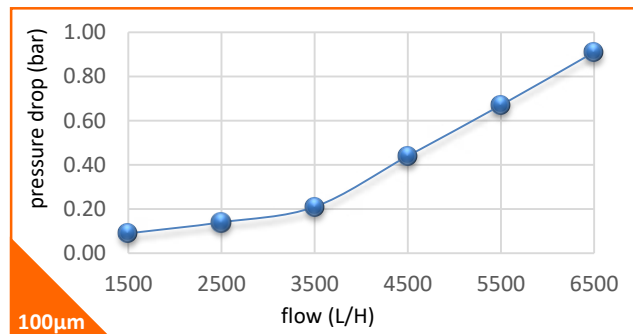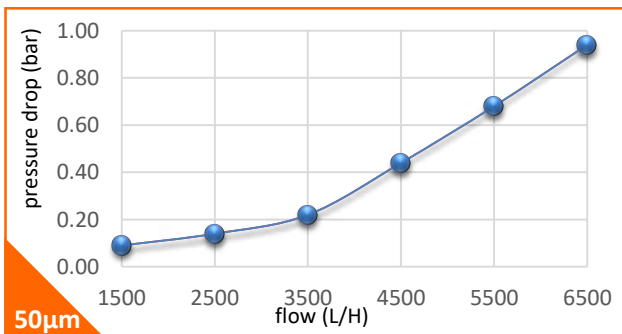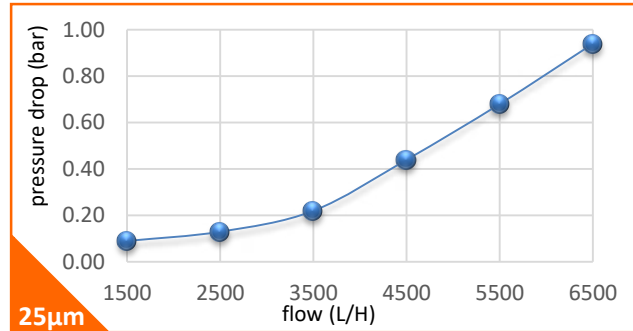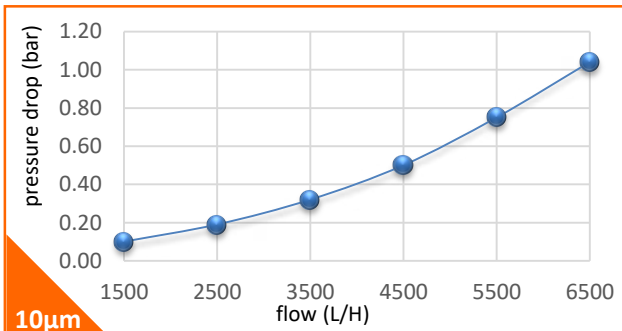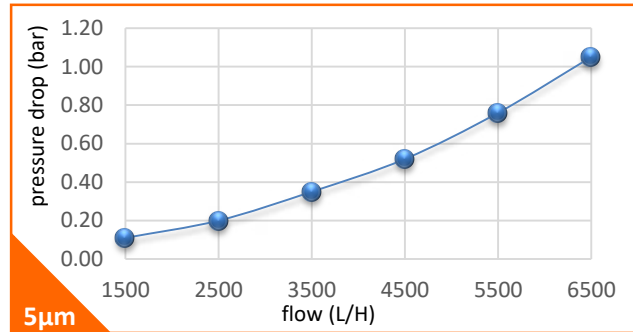



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

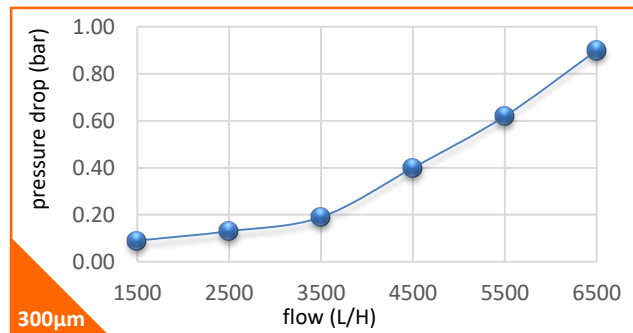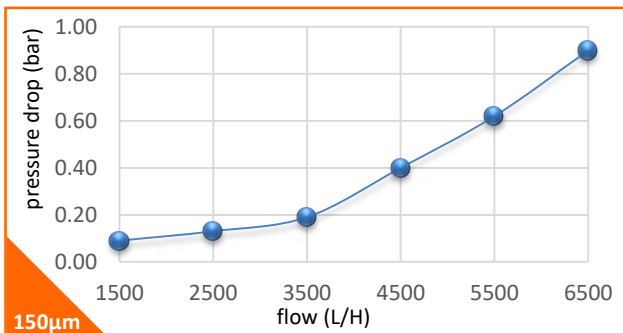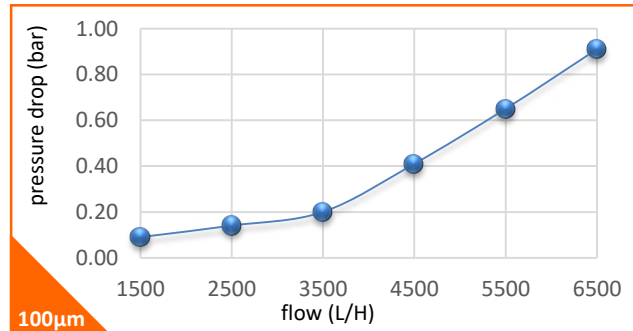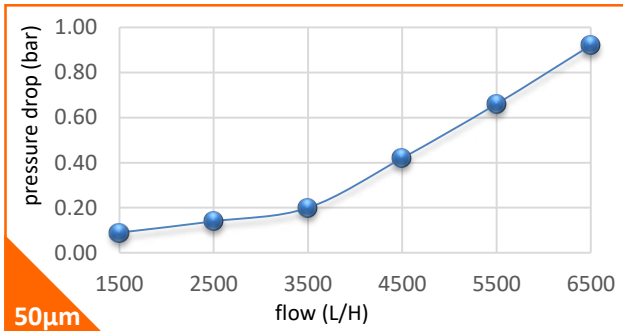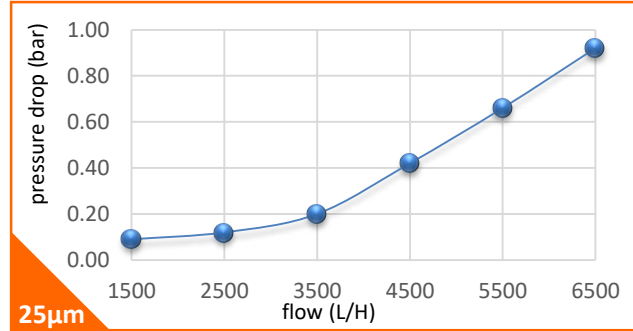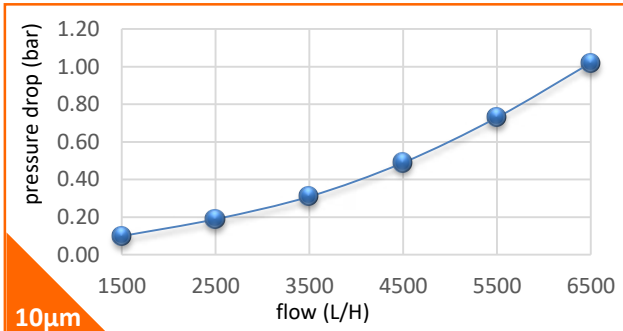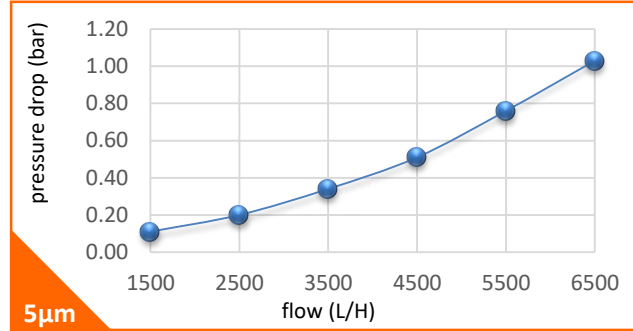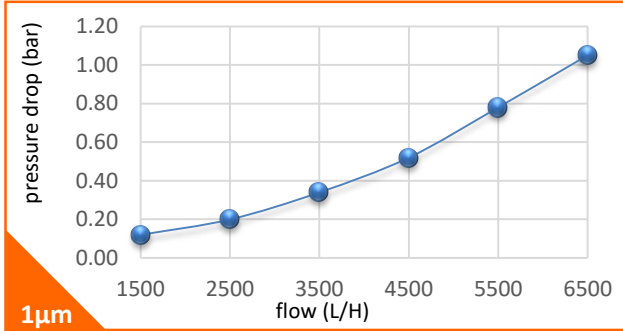



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

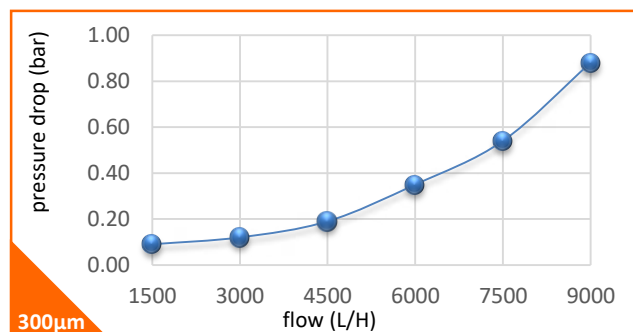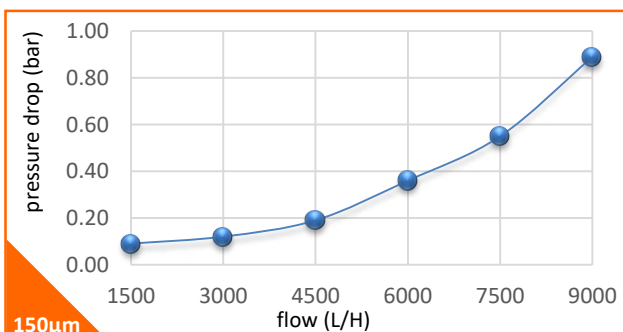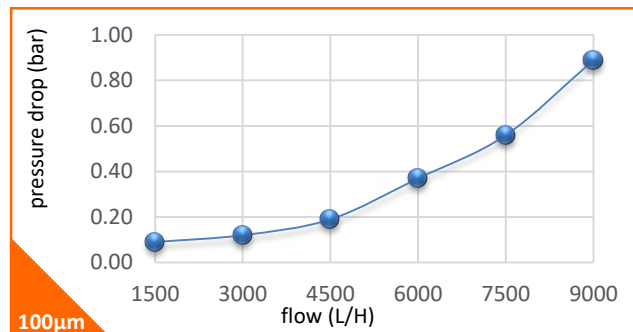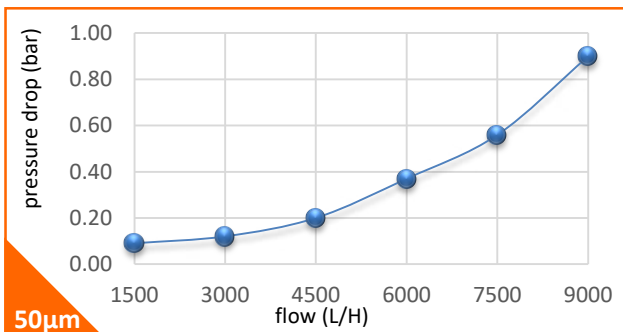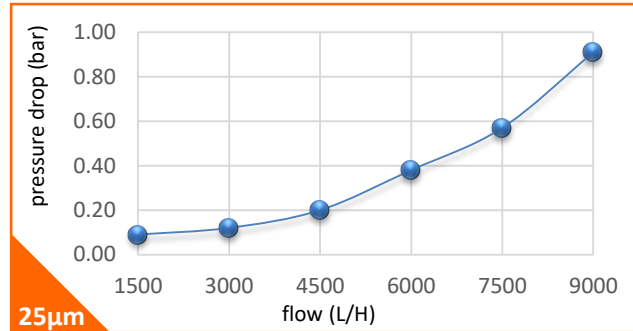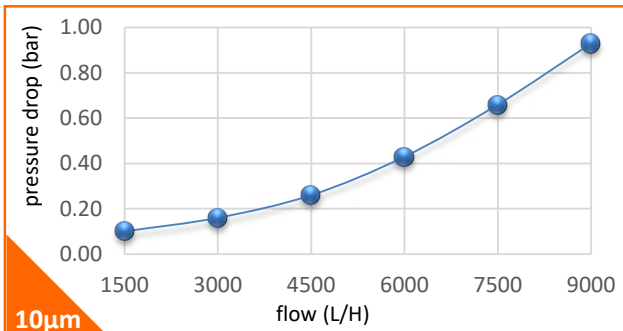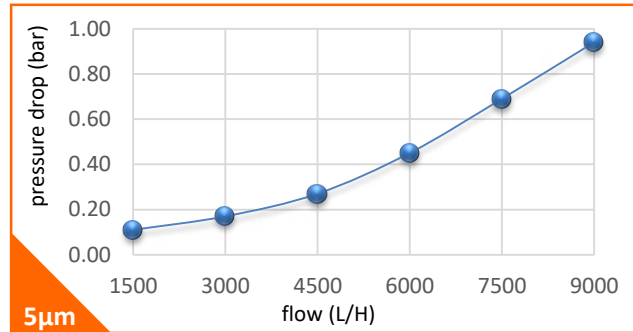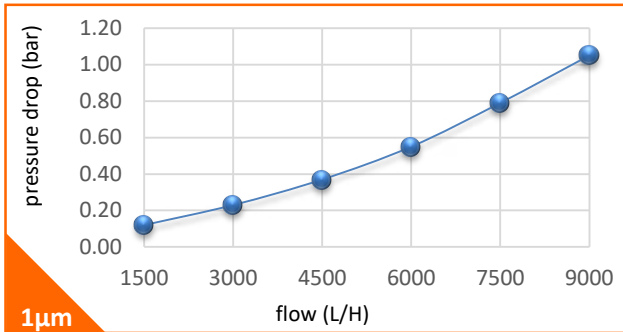



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

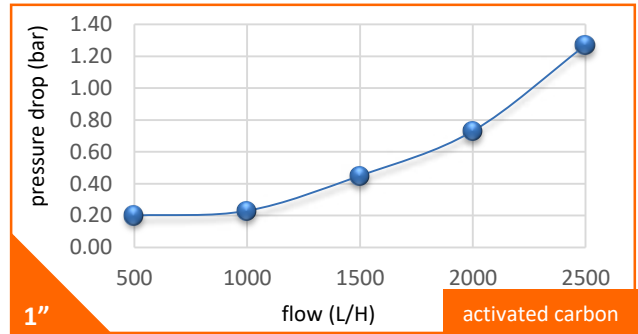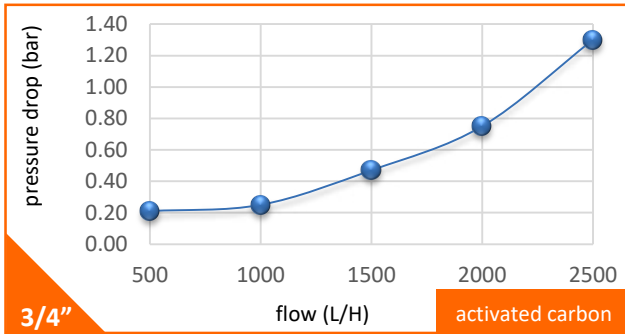











Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

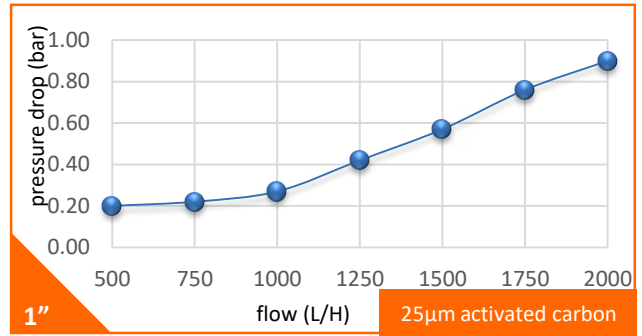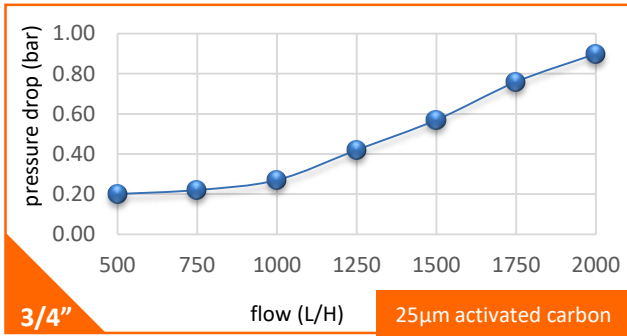




Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

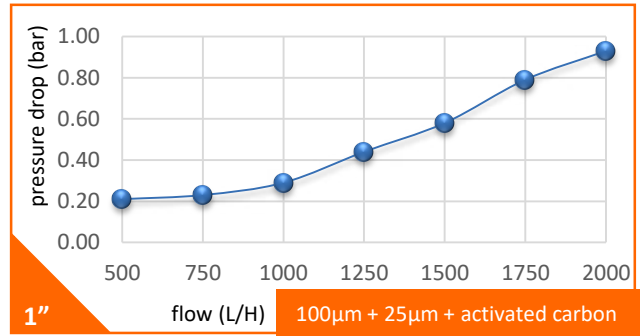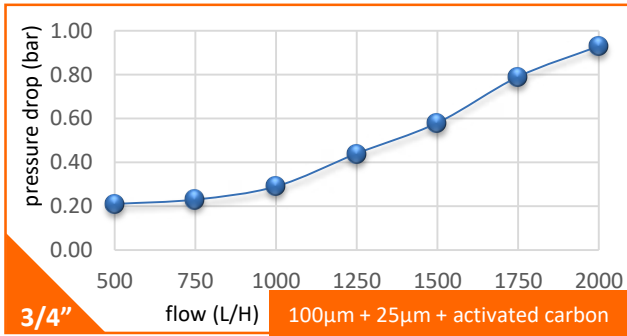











Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

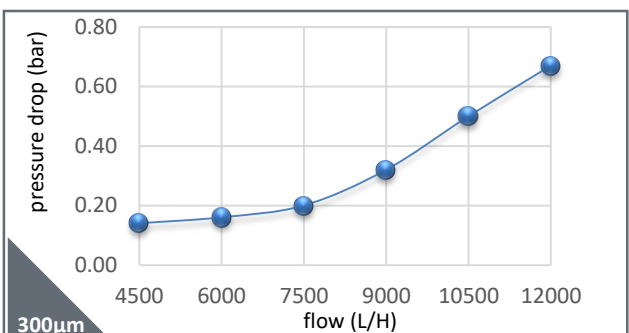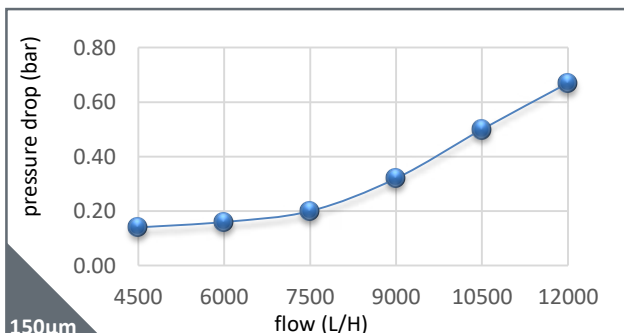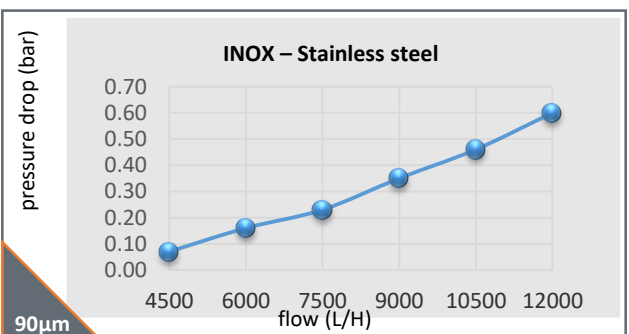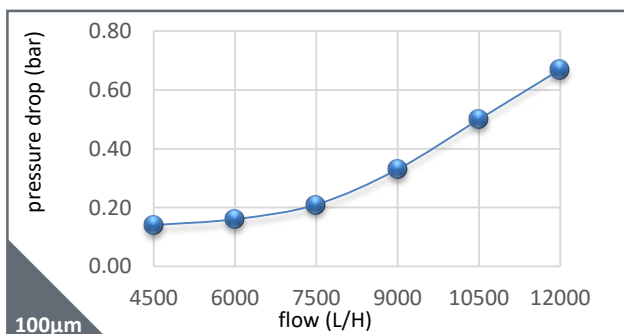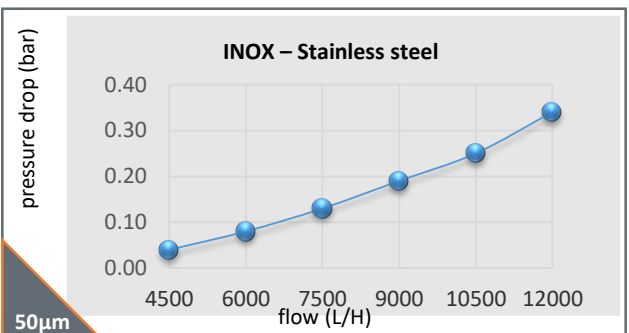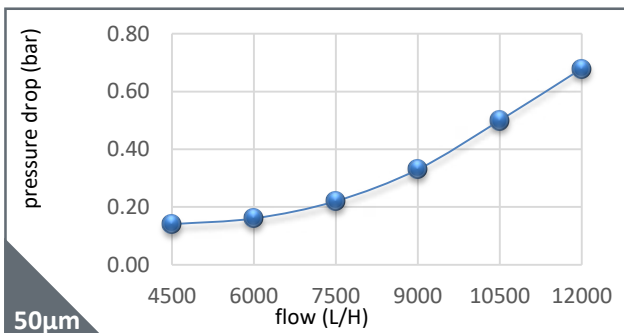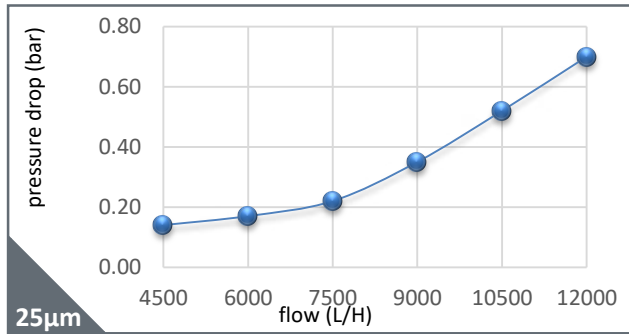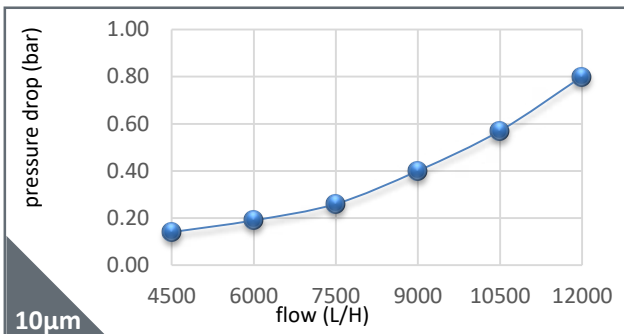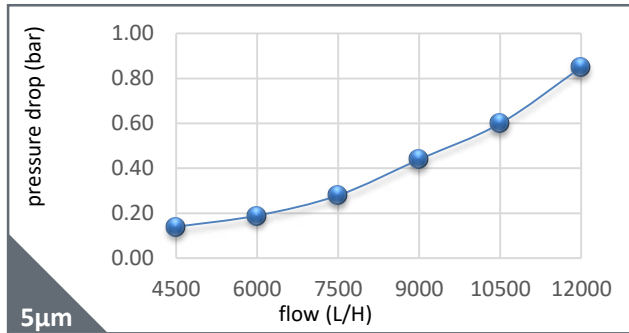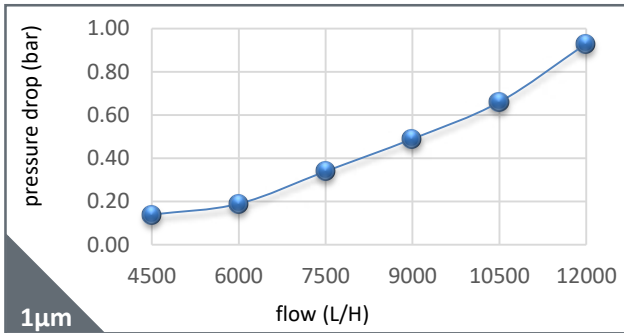











Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

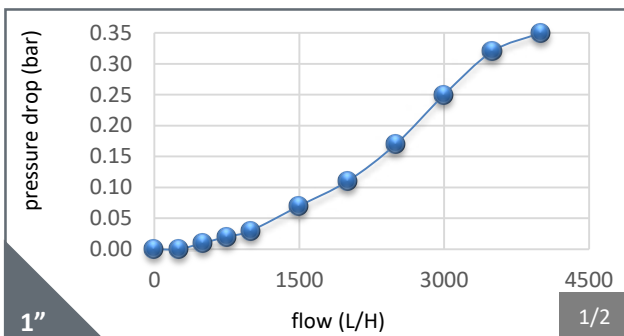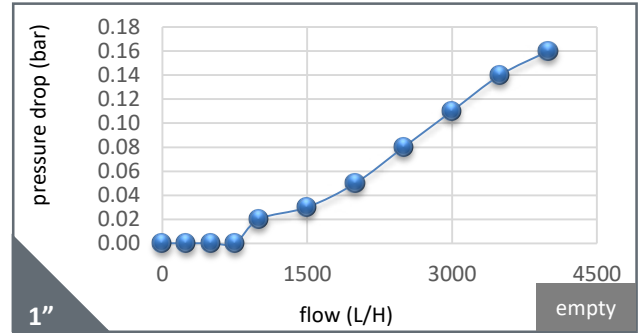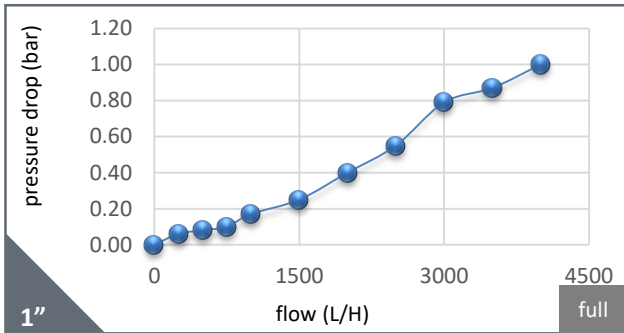











Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadok ciśnienia - Потеря давления - perda de carga

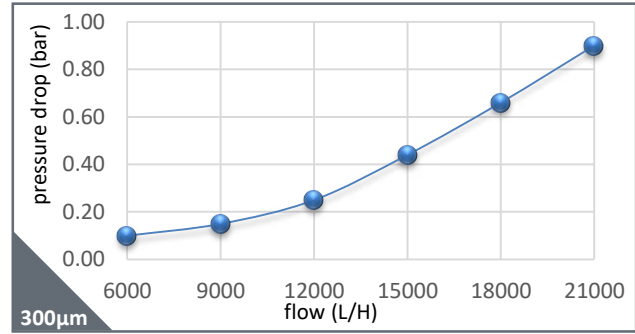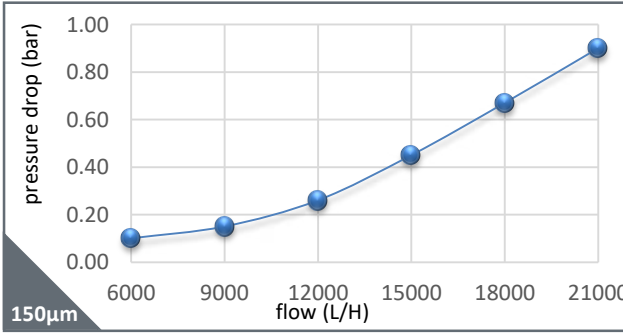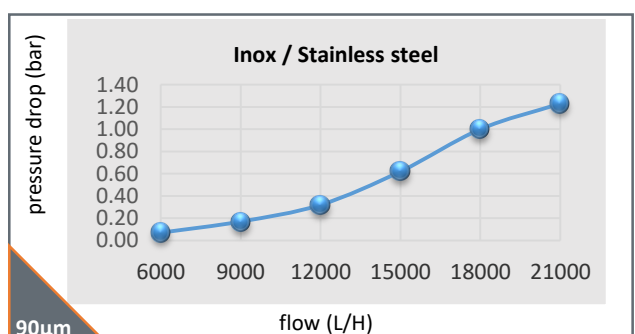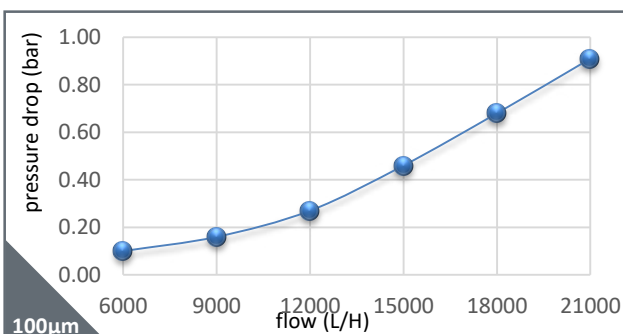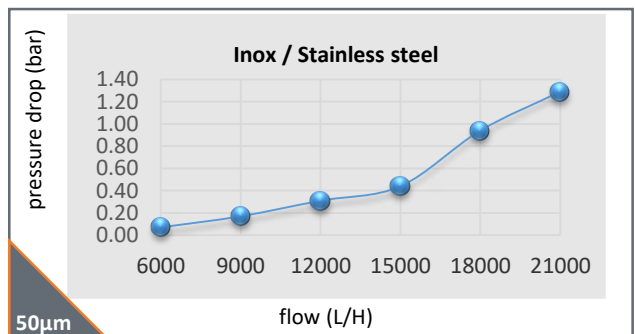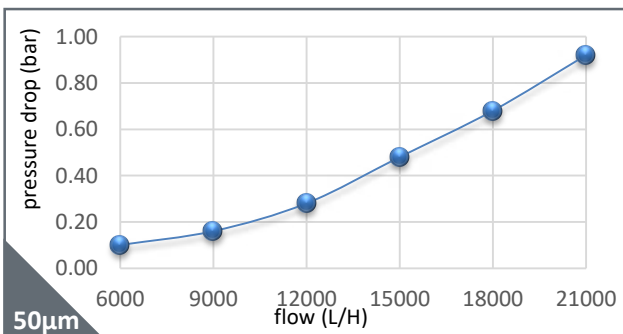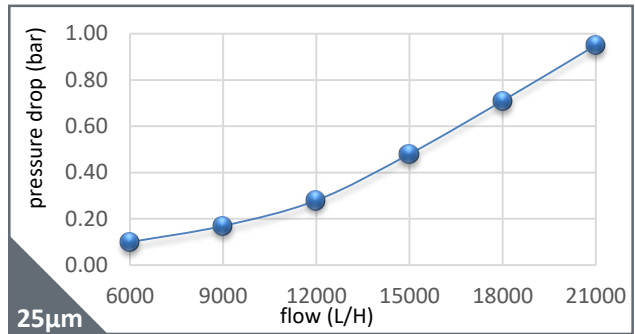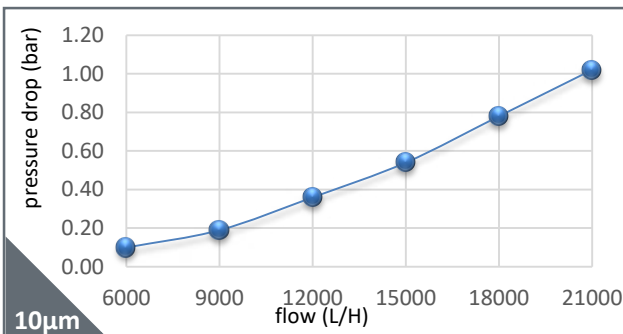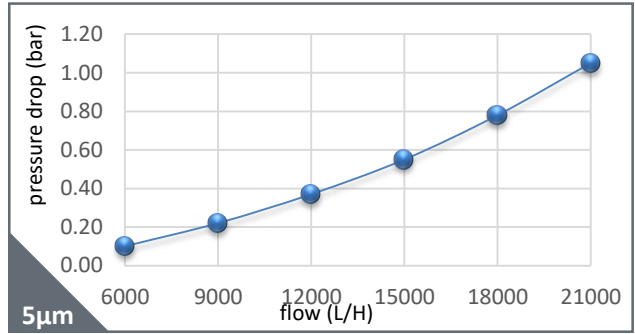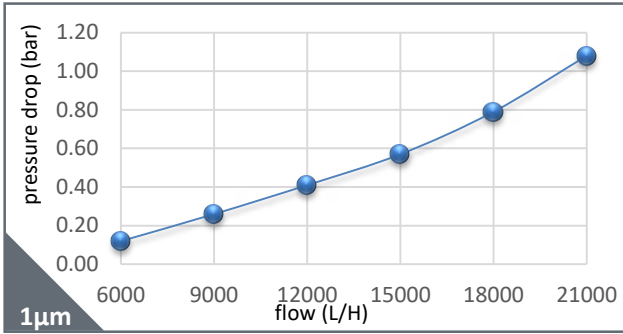











Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadok ciśnienia - Потеря давления - perda de carga

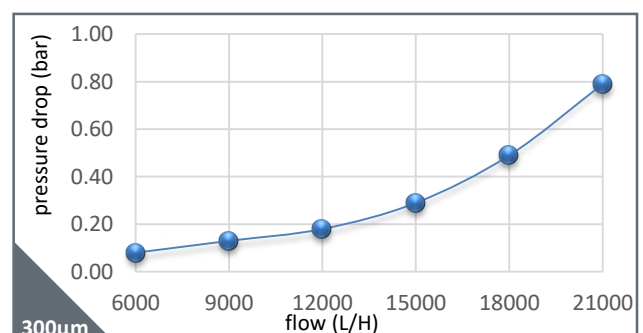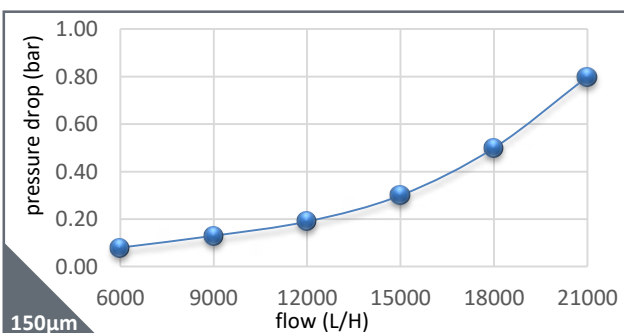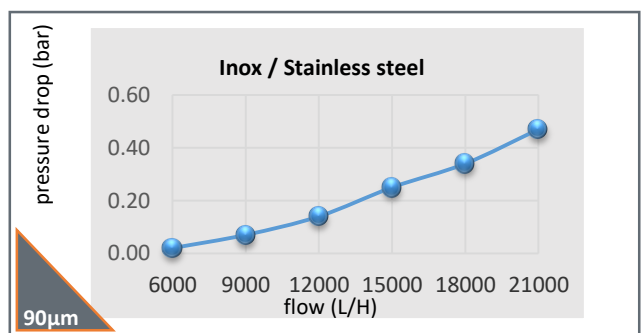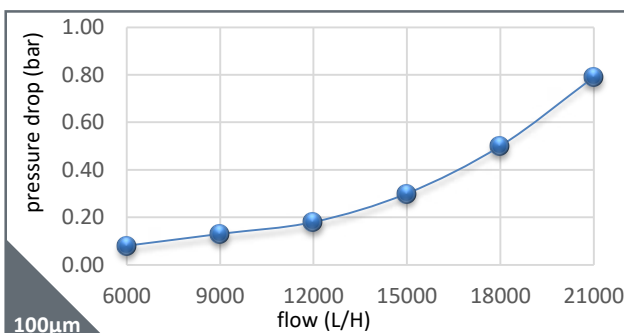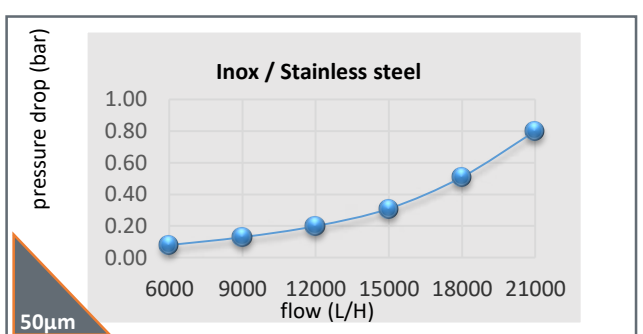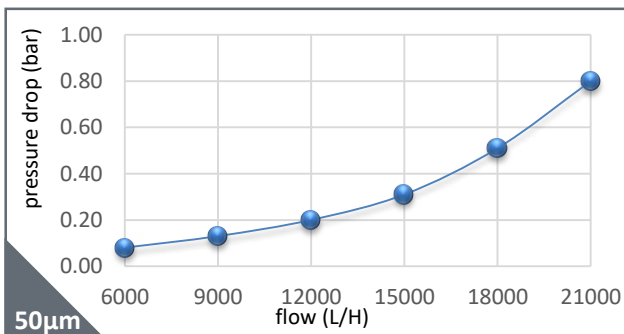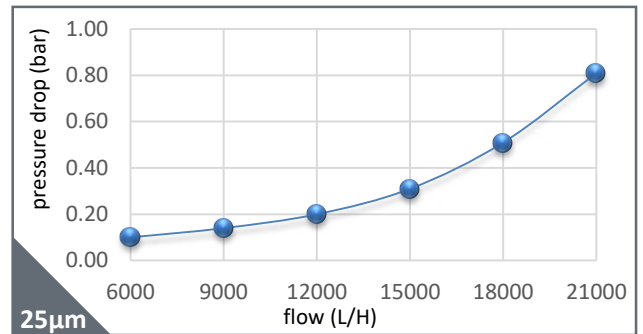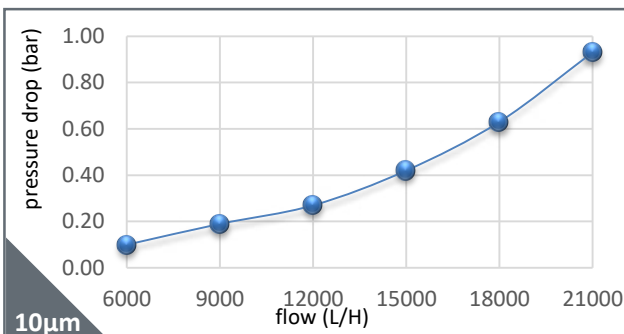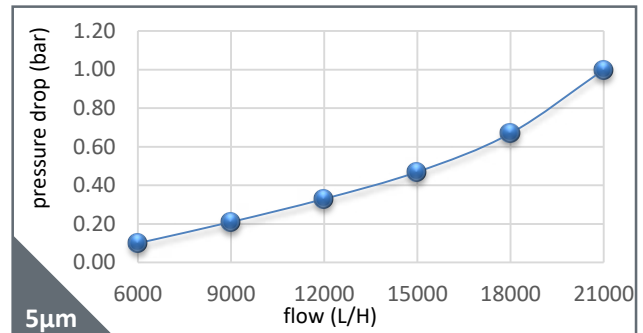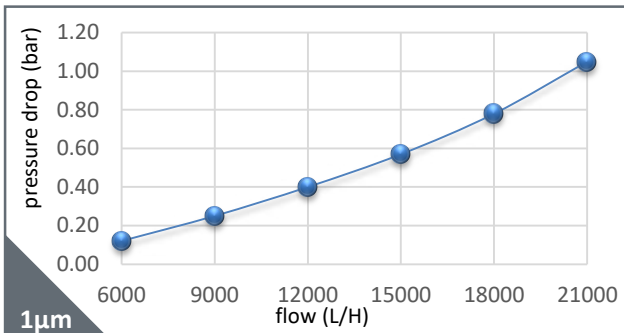











Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadok ciśnienia - Потеря давления - perda de carga

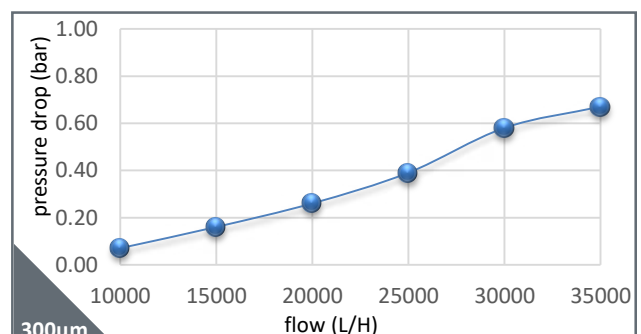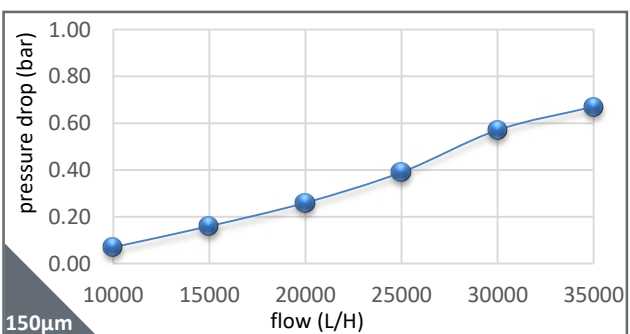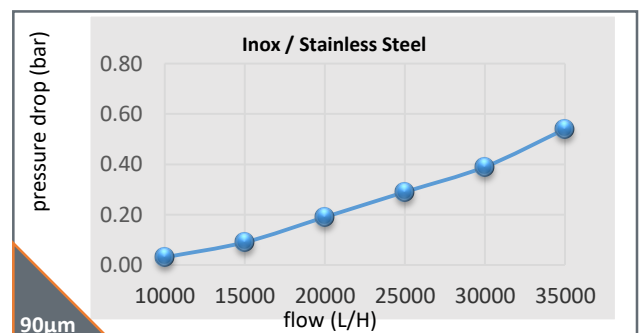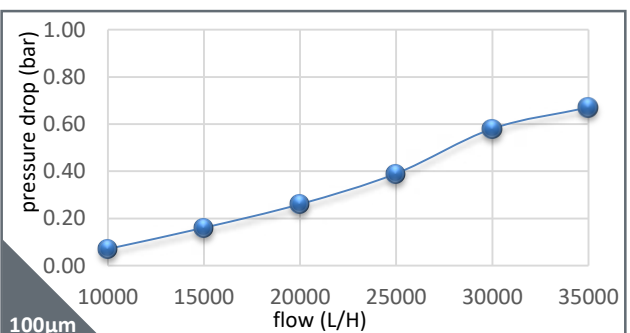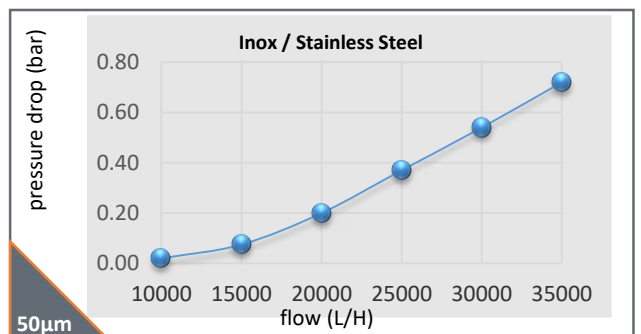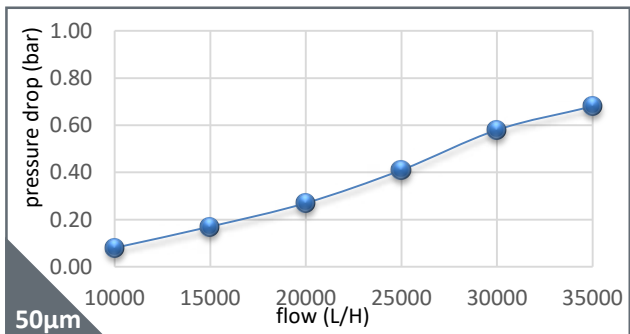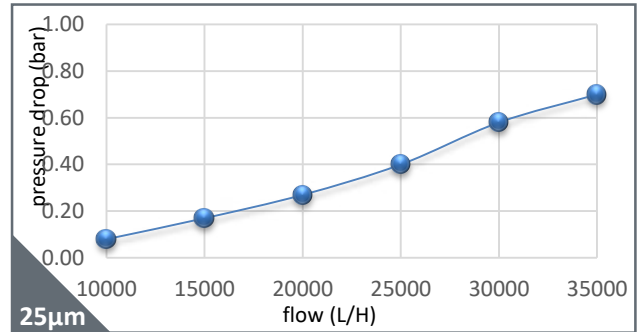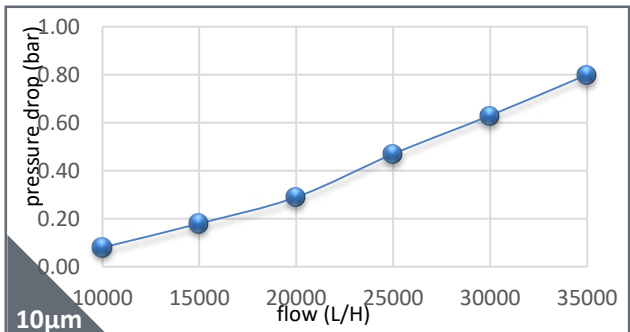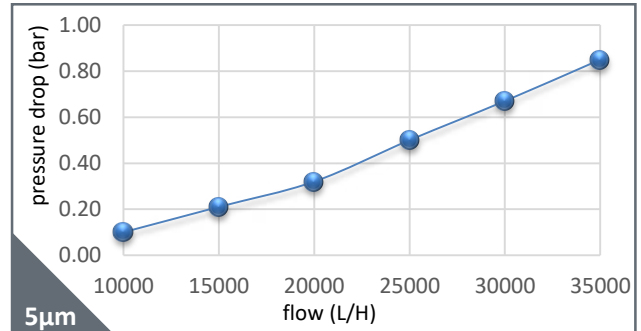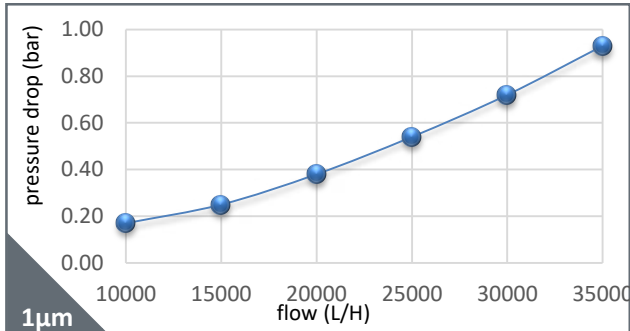







Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

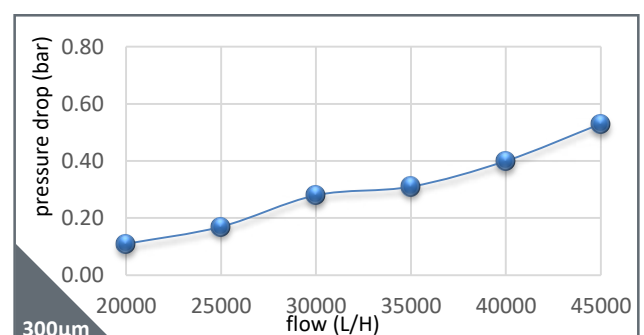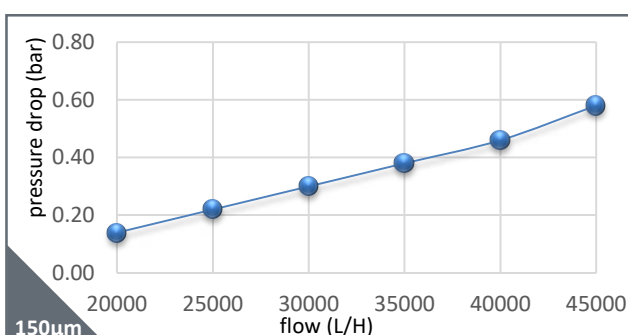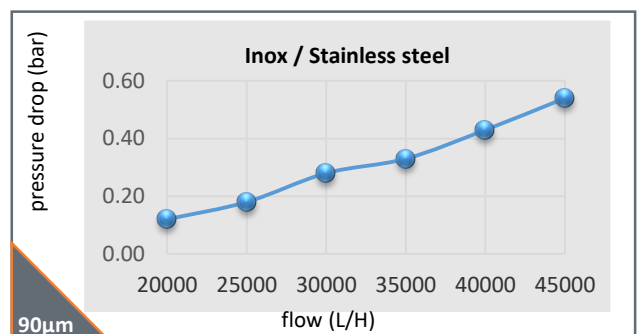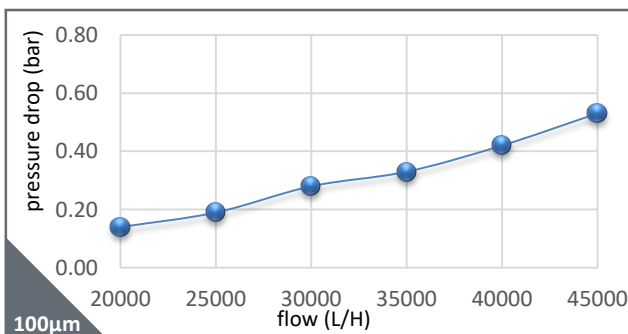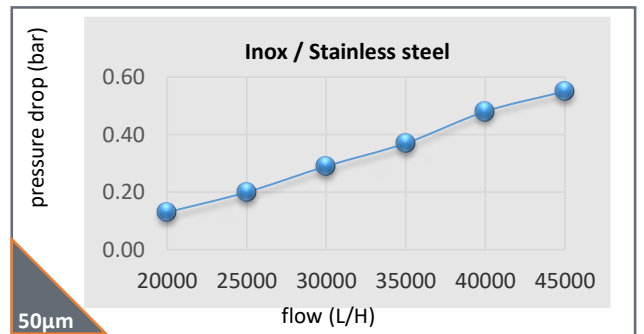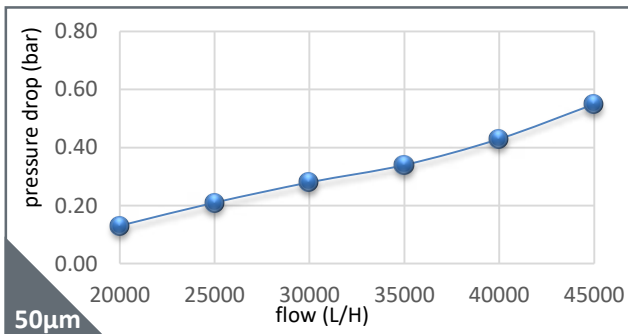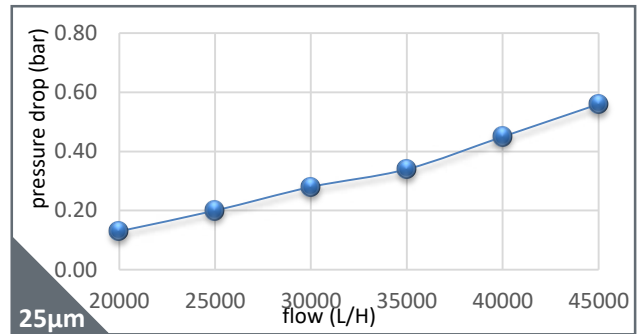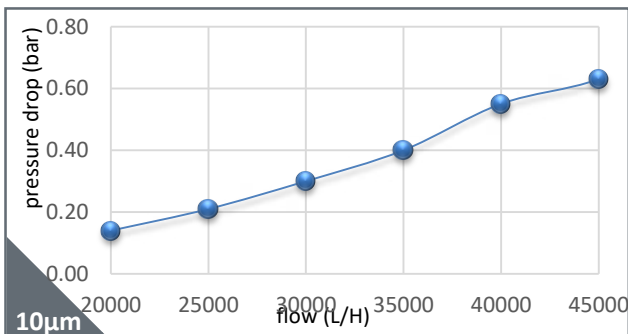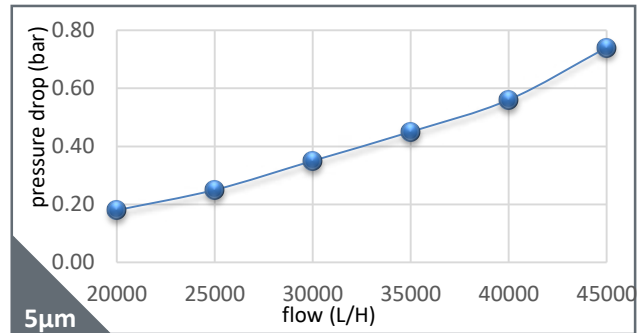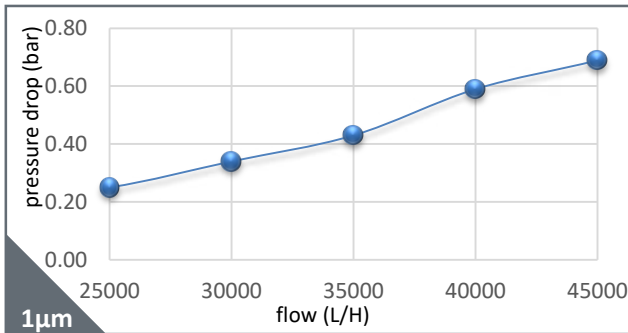








Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

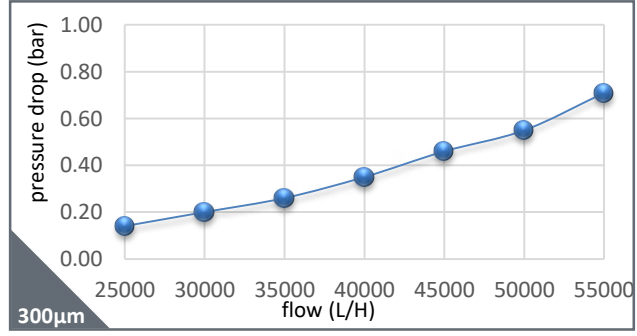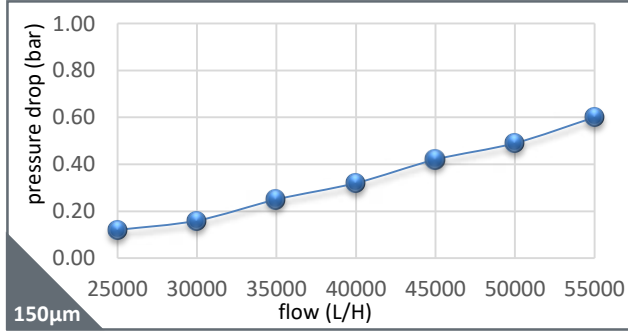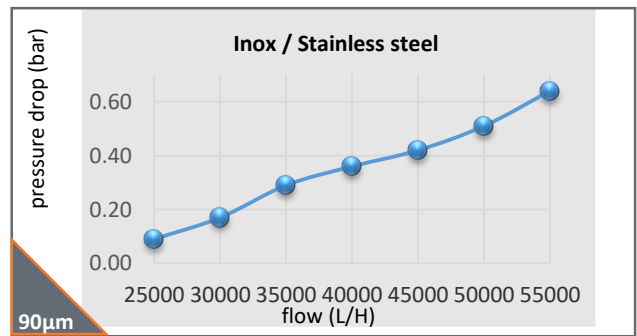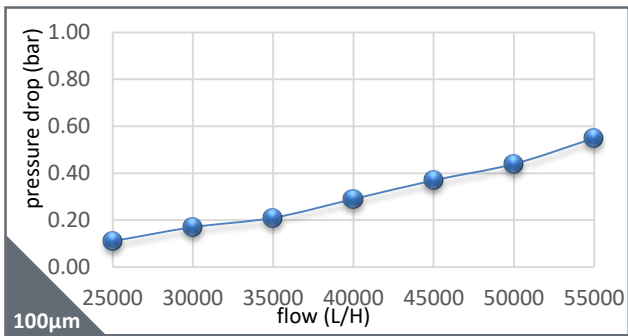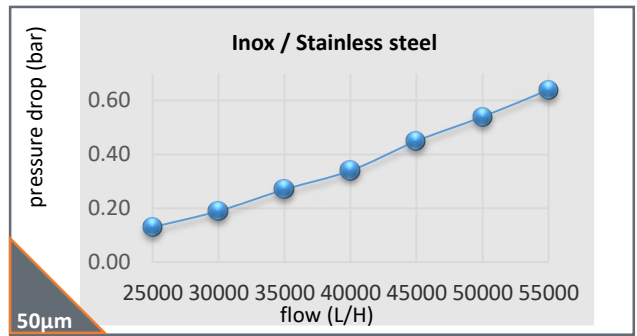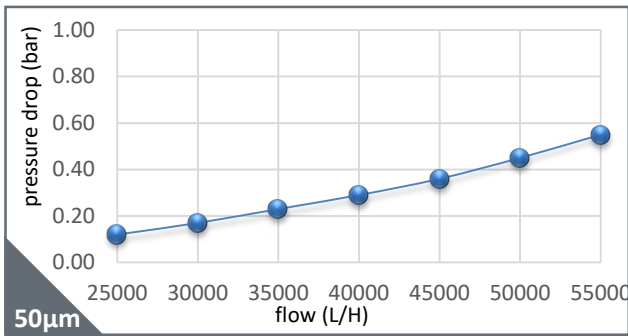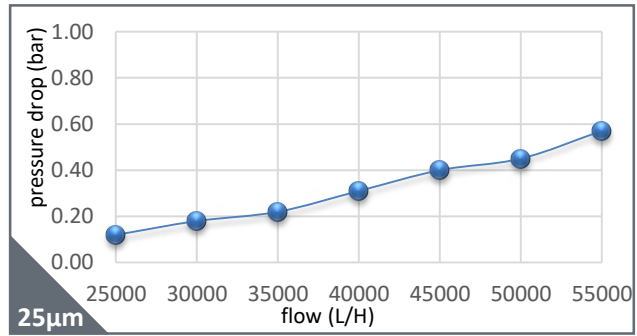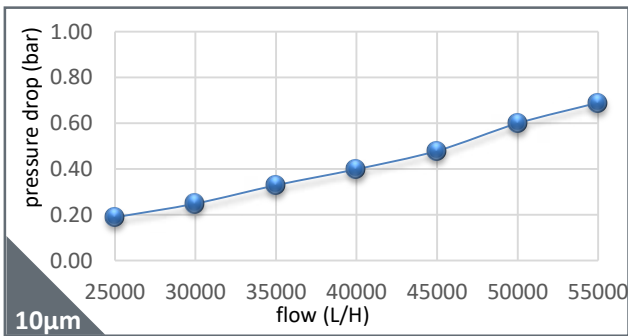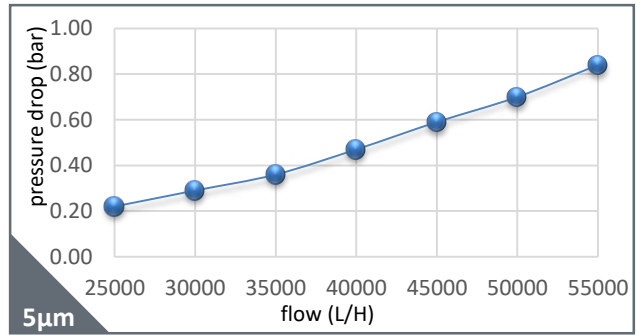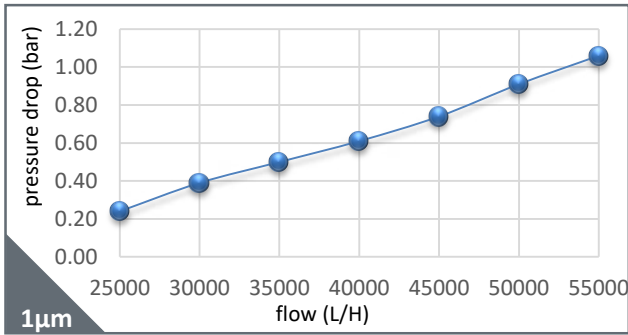








Perte de charge - drukverlies - Druckverlust - pressure drop -
pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

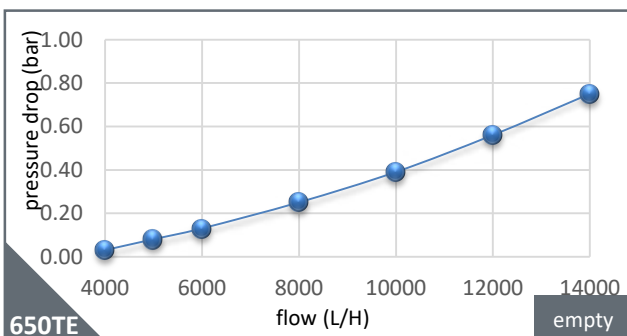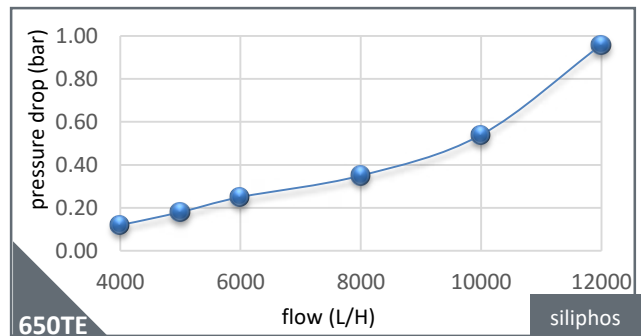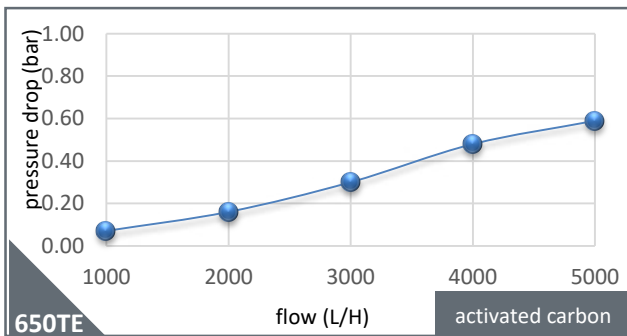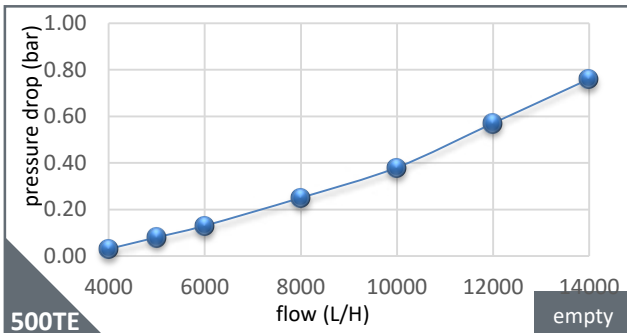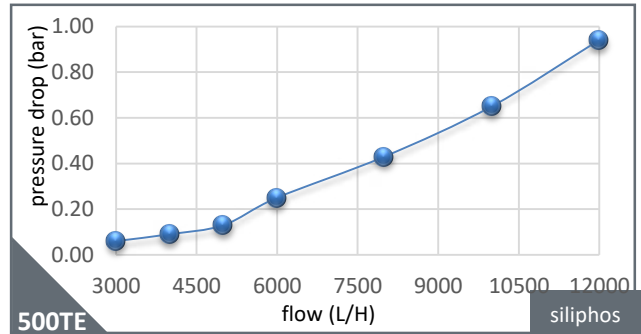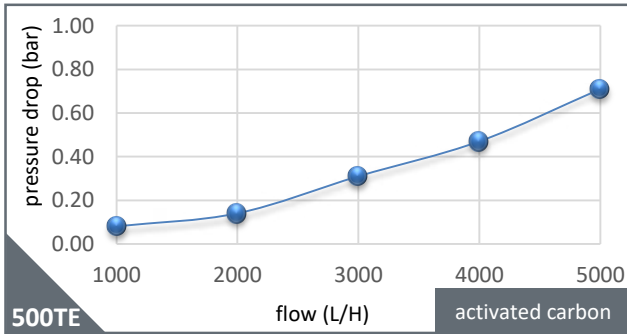








Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

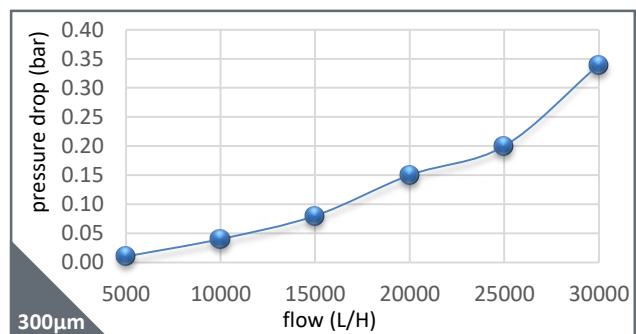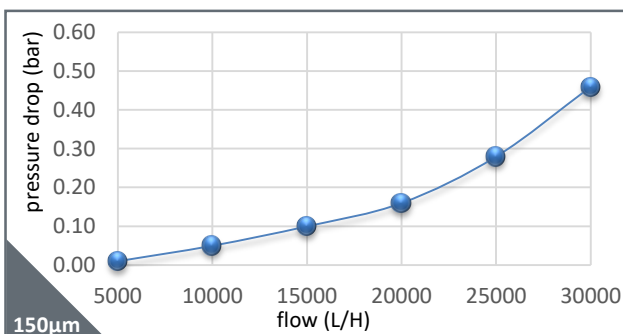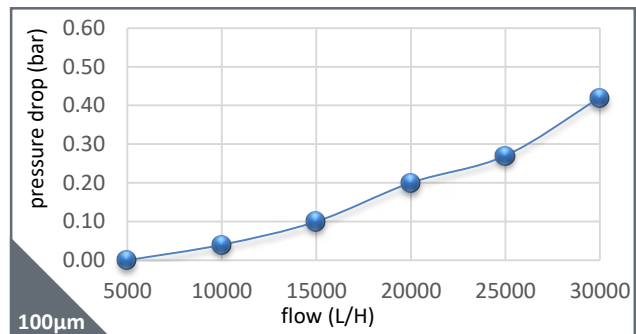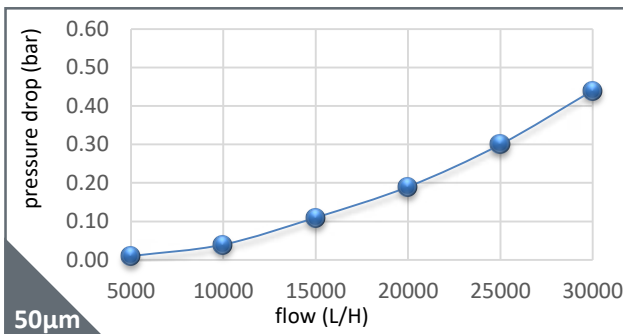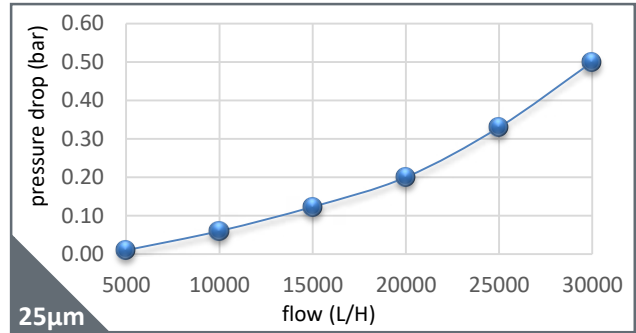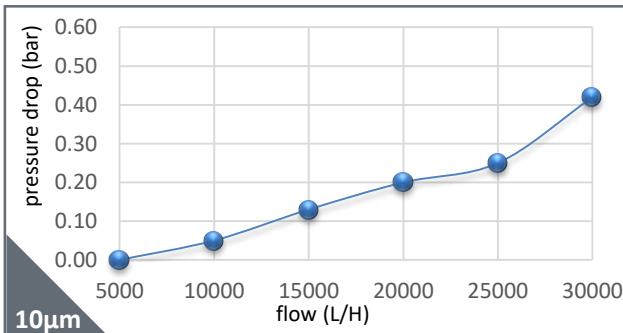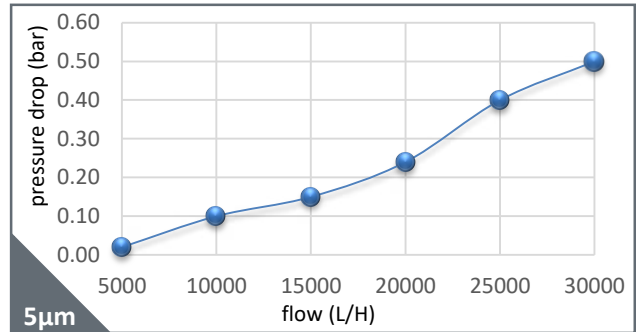







Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

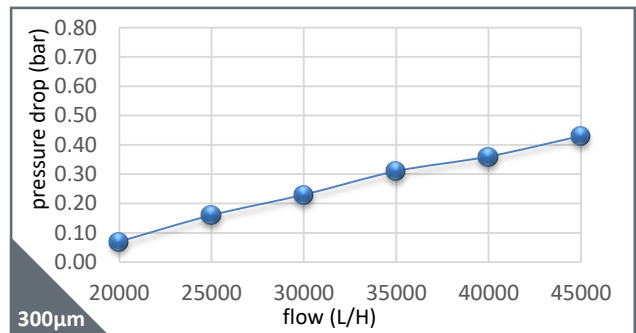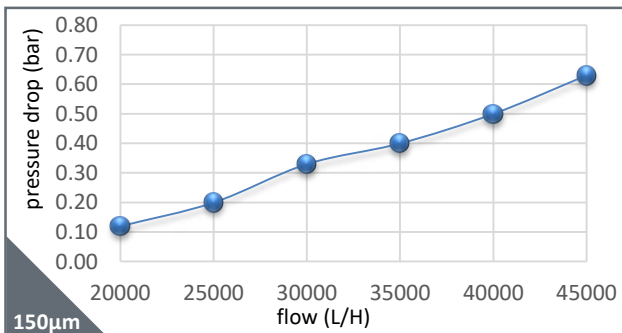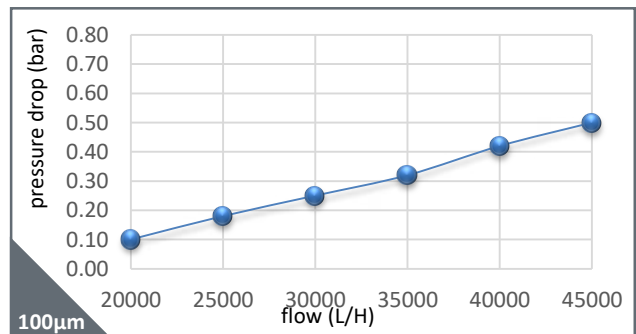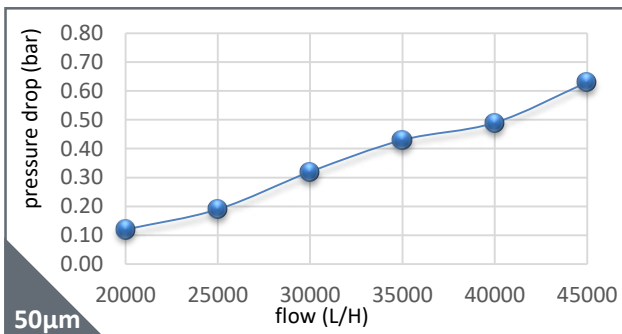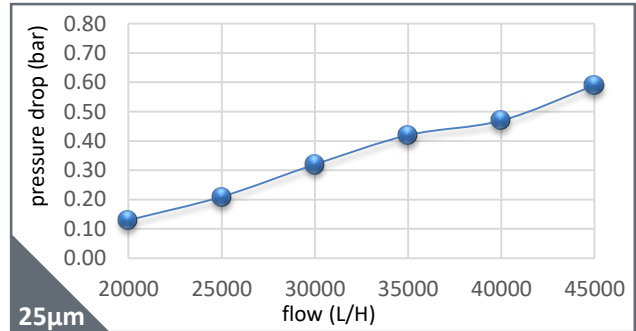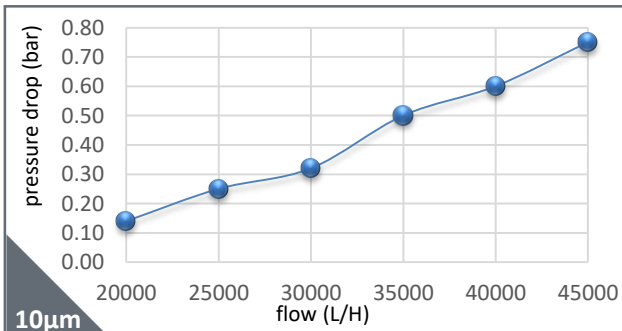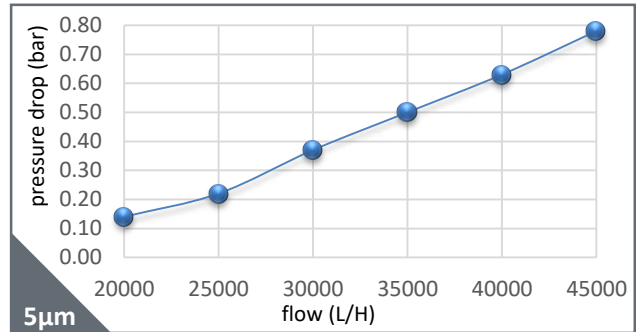



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

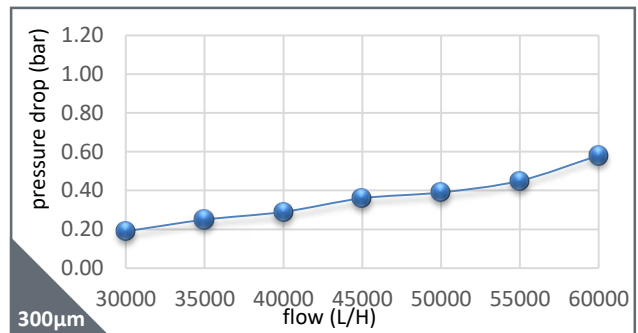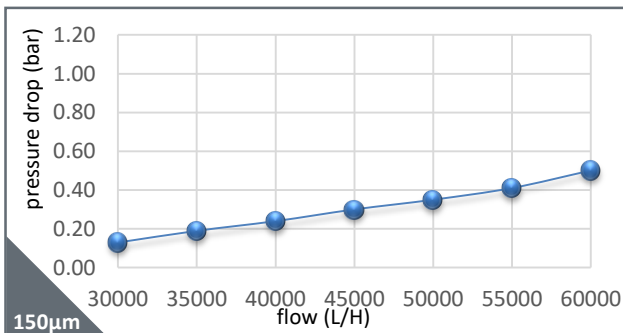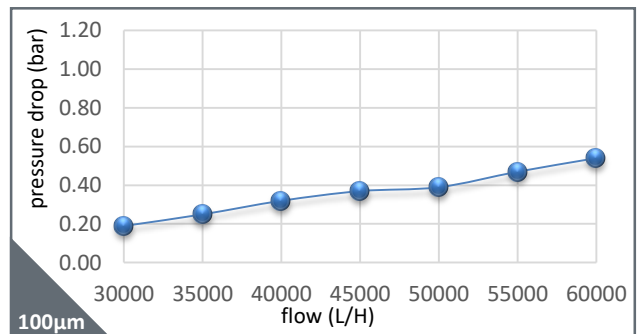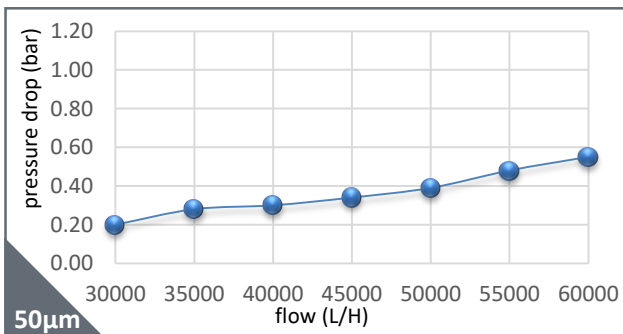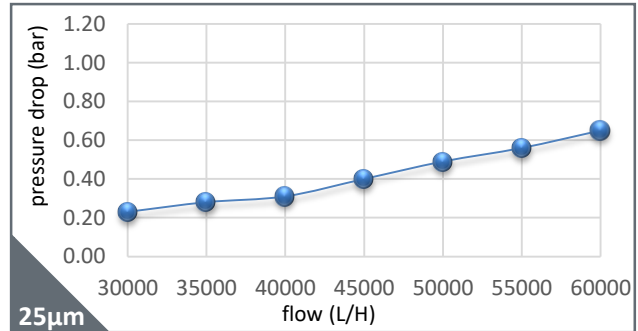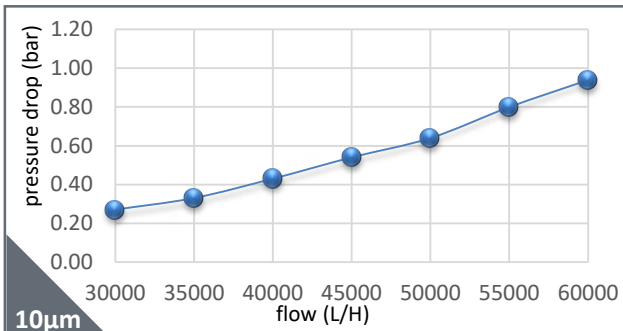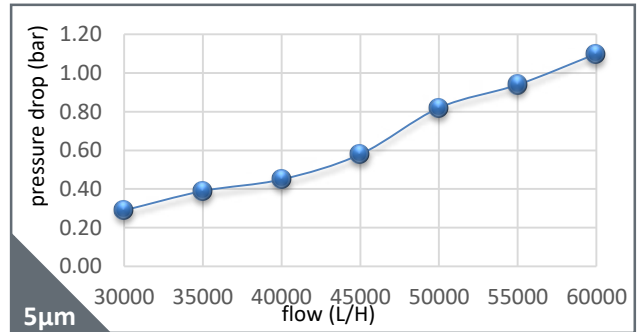


Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

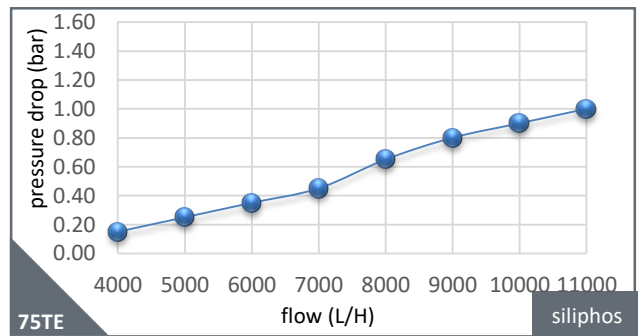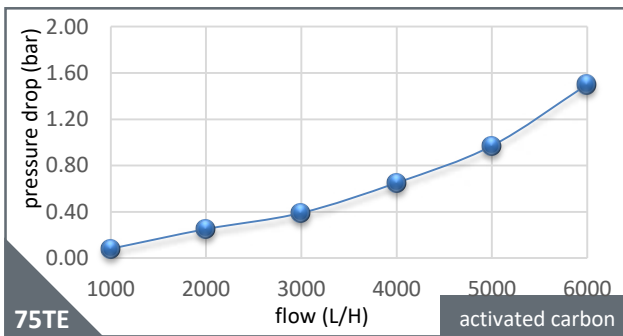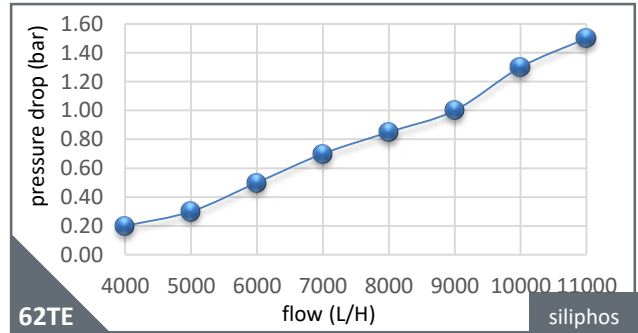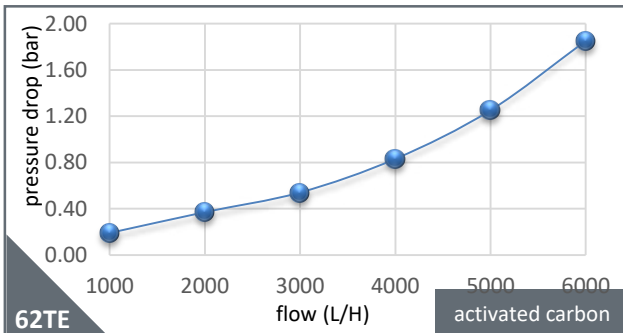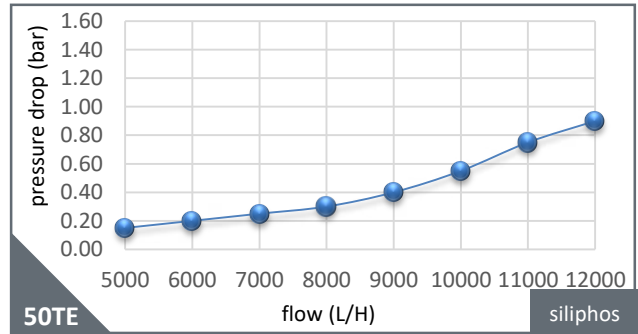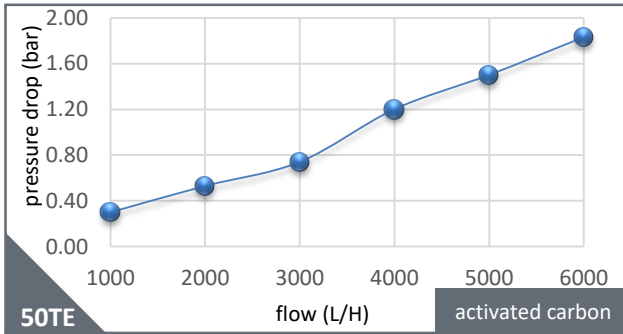


Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

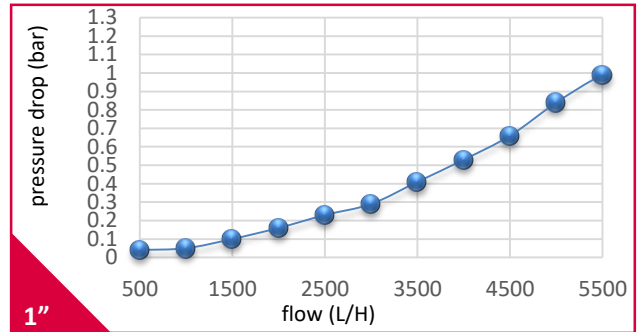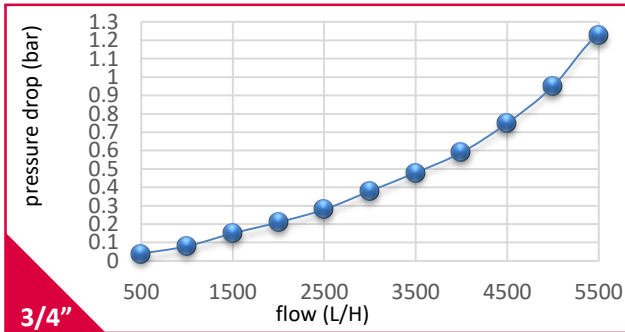



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

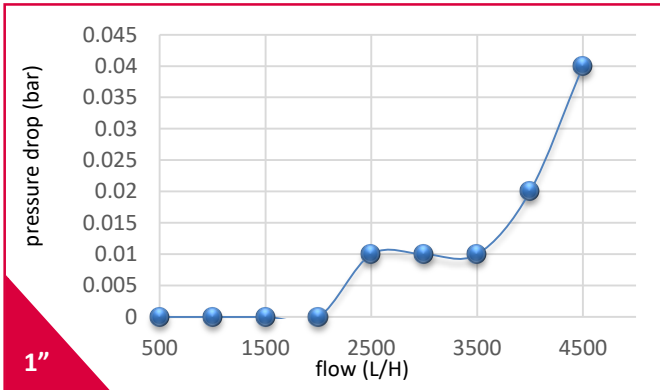



Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

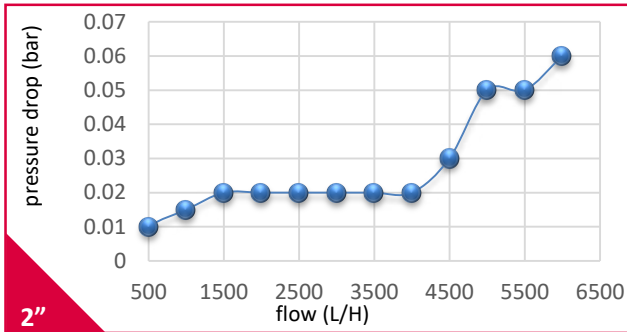


Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

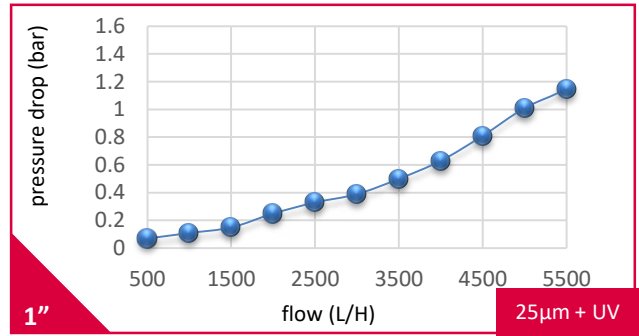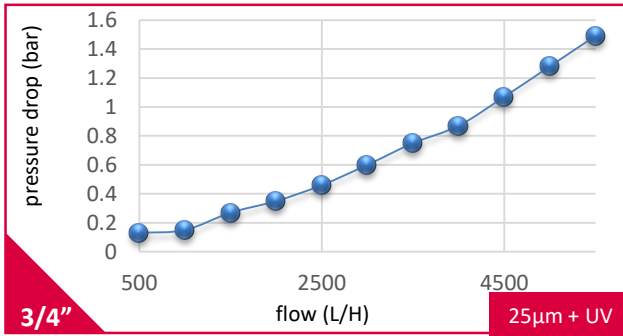

Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

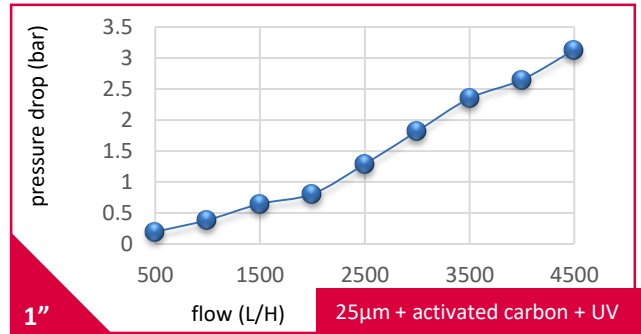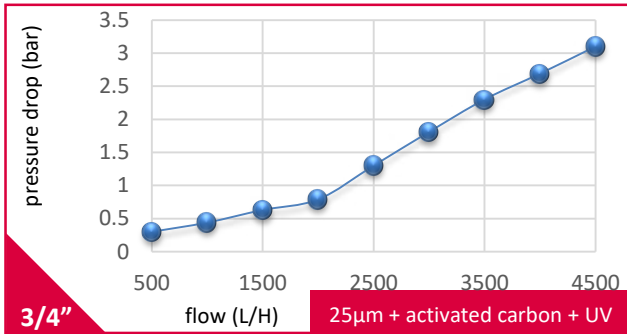

Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

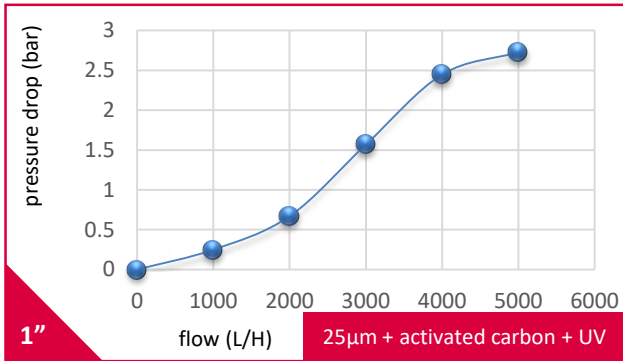

Perte de charge - drukverlies - Druckverlust - pressure drop -
 pérdida de carga - spadek ciśnienia - Потеря давления - perda de carga

